Ständer L75

Art-Nr. 230918 VBK0625 Stand: 19.09.2025

Montageanleitung Handel

HINWEIS
Die Montage Ständer L75 darf nur von Fachpersonal durchgeführt werden.

Lieferumfang

Nr.	Benennung	Art-Nr.	Anzahl
1	Ständer Load 75 MY20 passt auch für MY19	210870	1x
2	Ständerschuh außen EC 24 schwarz für Load	9721450	2x
3	Gleitlager Iglidur für Load Ständer	160187	2x
4	Schraube M8x30, A2	170394	2x
5	Ständerfeder	------	1x
5.1	Ständerfeder Standard (vormontiert)	9721470	------
5.2	Ständerfeder Cargo Verstärkung (vormontiert)	9721474	------
5.3	Ringöse M5x50 A2 Art.-Nr.: 48 (238) (vormontiert)	233406	------
5.4	Ringöse M5x40 A2 Art.-Nr.: 48 (175) (vormontiert)	160334	------
5.5	Mutter M5 DIN 934 A2 (36) (vormoniert)	9119300	------
6	U-Scheibe M5 klein d= 5,3 mm (3)	9721523	4x
7	Sechskantmutter M5 selbstsichernd (43)	9109300	2x
8	U-Scheibe M8 klein d= 8.4 mm (6)	9721528	2x
9	Mutter M8 (39)	170532	2x
10	Spacer, Kunststoff, schwarz, 6x15x7 (k)	9118910	2x
11	Rändelschraube AM6x20/20 niedrig (178)	170474	2
12	Silikonschlauch 15 x 18mm Cargo Ständerfeder	170340	5,0 cm
	Anleitung Ständer Load 75 (ohne Abb.)	230918	1x

Benötigte Sicherungsmittel

Nr.	Benennung	Anzahl / Menge
--	Loctite® 243 mittelfest, blau Schraubensicherung (kein Lieferumfang)	n. Bedarf

Teileübersicht

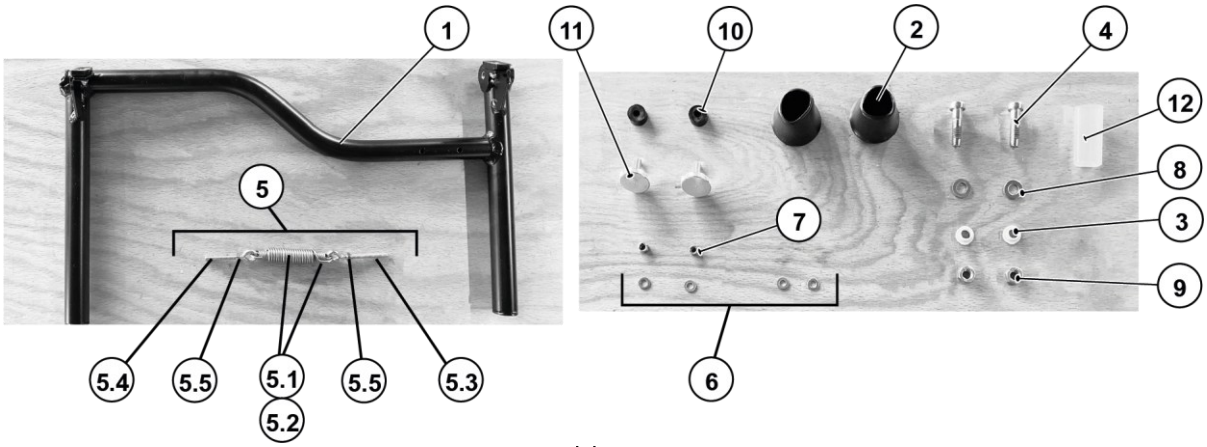

Abb. 01

Voraussetzungen

- Ständerschutz ist ausgebaut.
- Ständer ist ausgebaut.

Ständer anbauen

1. 2x Gleitlager Iglidur (3) in Rahmenaufnahme (13) einsetzen.
2. Ständer (1) zwischen den Rahmenaufnahmen (13) positionieren und 2x mit Befestigungselementen (4), (8) und (9) handfest befestigen. Ausrichtung Ständer beachten.
3. Ständer (1) mittig zwischen Rahmenaufnahmen (13) ausrichten und 2x Befestigungselement (9) gegen Ständer kontern.



Abb. 02: Ansicht unten, auf linke Seite gelegt

Ständerfeder anbauen

1. Silikonschlauch (12) auf Ständerfeder (5) aufziehen.
2. Ständerfeder (5) am Ständer (1) mit Ringöse (5.4), Befestigungselement (5.5) (vormontiert), 2x mit Befestigungselement (6) und (7) befestigen. Ringöse an der inneren Bohrung des Ständers befestigen, Ausrichtung der Ringöse beachten.
3. Ständerfeder (5) am Rahmen (14) mit Ringöse (5.3), Befestigungselement (5.5) (vormontiert), 2x mit Befestigungselement (6) und (7) befestigen. Ringöse an der inneren Bohrung des Rahmens befestigen, Ausrichtung der Ringöse beachten.

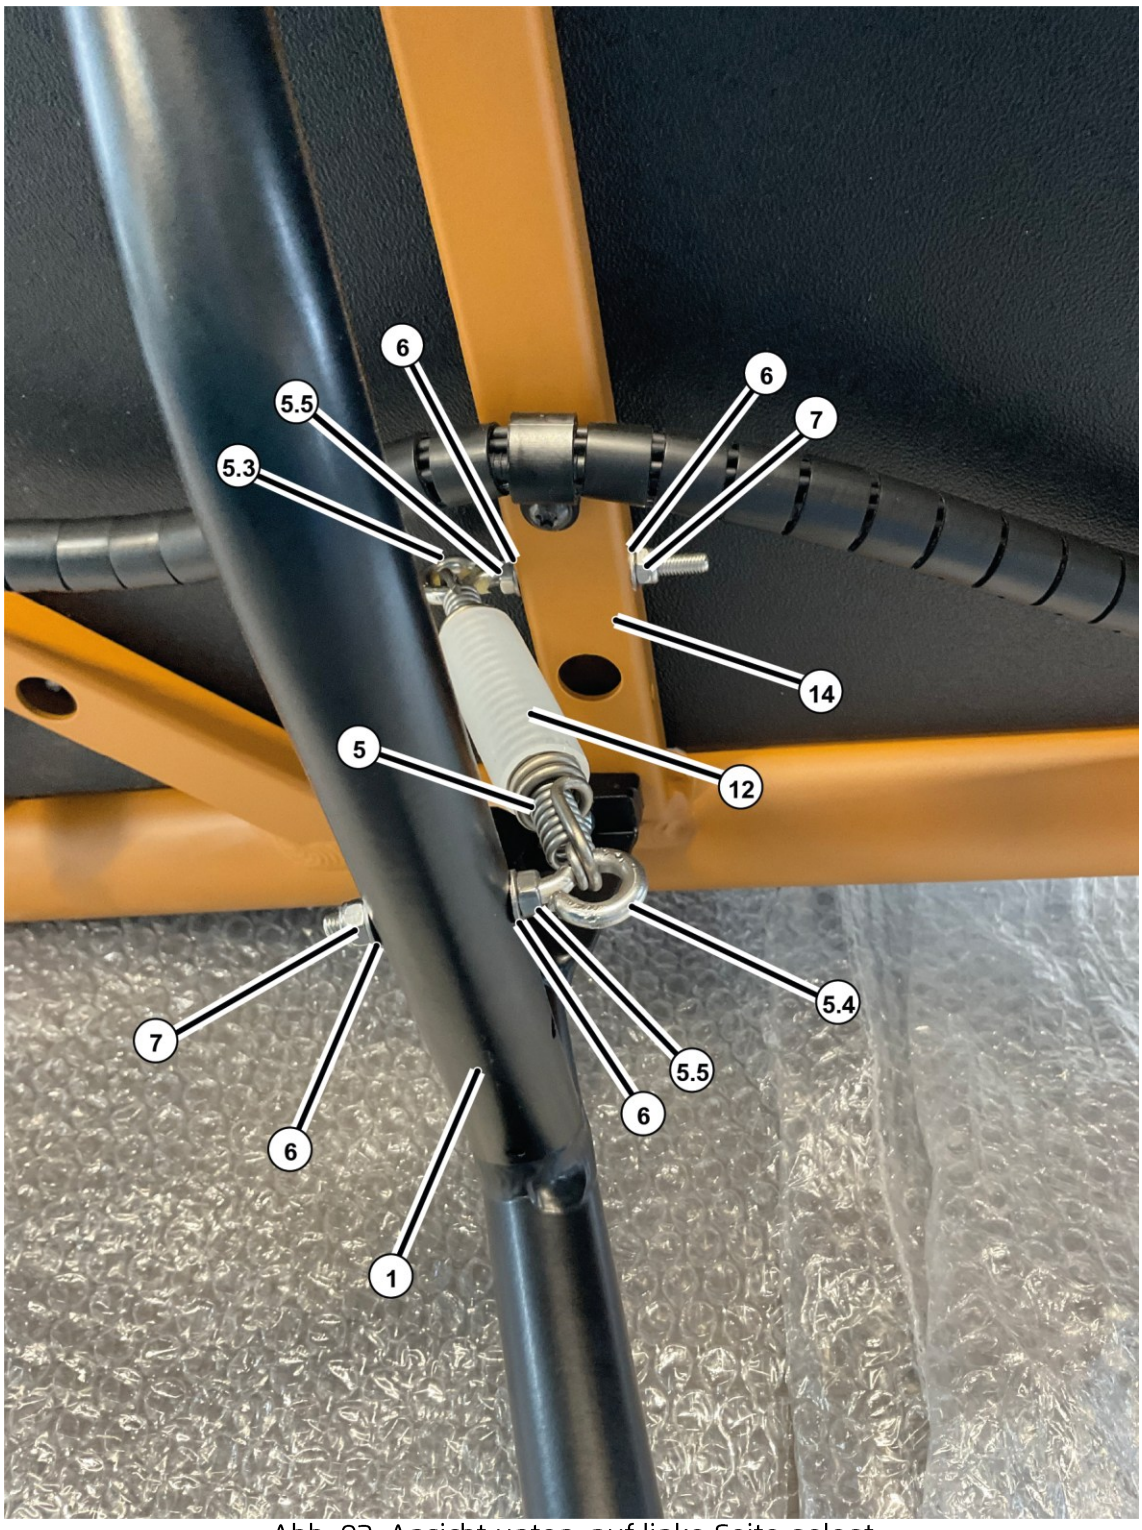

Abb. 03: Ansicht unten, auf linke Seite gelegt

Ständerfüße anbauen

1. 2x Spacer (10) mit Rändelschrauben (11) am Ständer (1) befestigen. Rändelschraube mit Loctite sichern.
2. 2x Ständerschuh (2) am Ständer (1) befestigen.

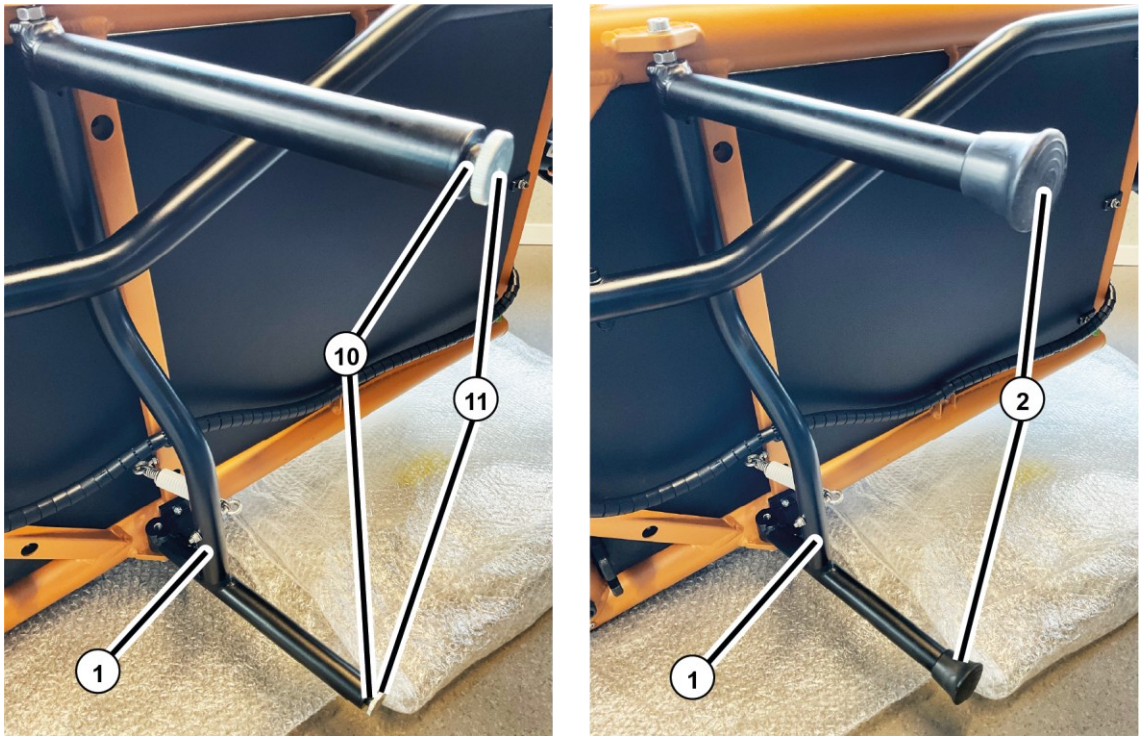

Abb. 04: Ansicht unten, auf linke Seite gelegt

Wiedereinbau

- Ständerschutz wieder einbauen. Montagereihenfolge in umgekehrter Reihenfolge des Ausbaus.

Stand L75

Art-No. 230918 VBK0625; Dated: 19.09.2025

Dealer Assembly instruction

NOTICE
Only allow qualified personnel to assemble the stand L75.

Scope of delivery

No.	Part name	Art-no.	Number of parts
1	**Stand Load 75 MY20 also fits MY19**	210870	1x
2	External stand shoe EC 24 black for Load	9721450	2x
3	Slide bearing Iglidur for Load stand	160187	2x
4	Bolt M8x30, A2	170394	2x
5	**Stand spring**	------	1x
5.1	Stand spring standard (pre-assembled)	9721470	------
5.2	Stand spring Cargo reinforcement (pre-assembled)	9721474	------
5.3	Eyebolt M5x50 A2 Part no.: 48 (238) (pre-assembled)	233406	------
5.4	Eyebolt M5x40 A2 Part no.: 48 (175) (pre-assembled)	160334	------
5.5	Nut M5 DIN 934 A2 (36) (pre-assembled)	9119300	------
6	Washer M5 small d= 5.3 mm (3)	9721523	4x
7	Hexagon nut M5 self-locking (43	9109300	2x
8	Washer M8 small d= 8.4 mm (6)	9721528	2x
9	Nut M8 (39)	170532	2x
10	Spacer, plastic, black, 6x15x7 (k)	9118910	2x
11	Knurled screw AM6x20/20 low (178)	170474	2
12	Silicone tube 15 x 18mm Cargo stand spring	170340	5,0 cm
	Instruction Stand Load 75 (not shown)	230918	1x

No.	Part name	Number of parts / quantity
--	Loctite® 243 medium-strength, blue threadlocker (not included)	as required

Overview of parts

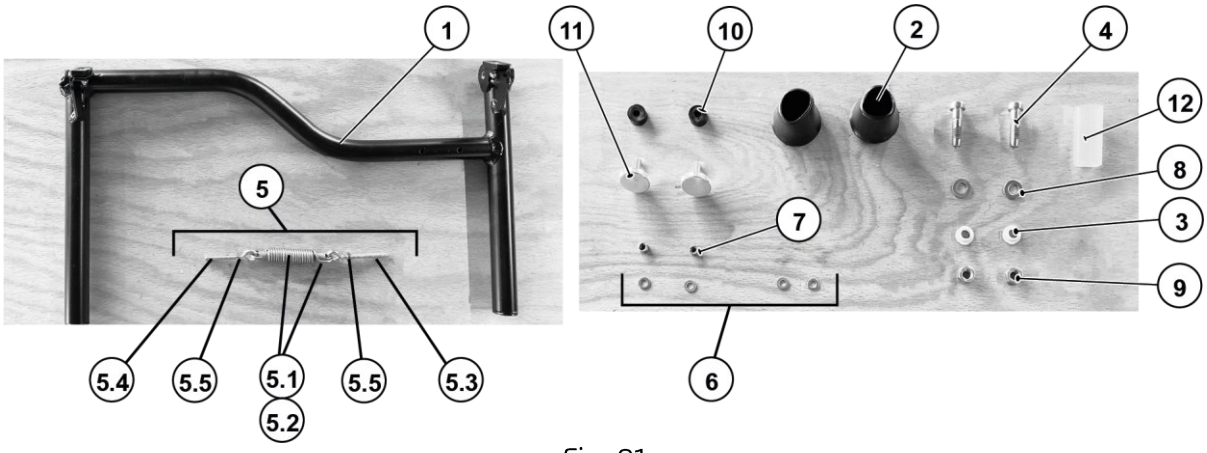

Fig. 01

Prerequisites

- Stand guard is removed.
- Stand is removed.

Fitting the stand

1. Insert 2x slide bearing Iglidur (3) into the frame mount (13).
2. Position stand (1) between the frame mounts (13) and fasten 2x hand-tight with fastening elements (4), (8) and (9). Note the alignment of the stand.
3. Align the stand (1) in the centre between the frame mounts (13) and lock 2x fastening element (9) against the stand.



Fig. 02: Bottom view, placed on left side

Fitting the stand spring

1. Pull the silicone tube (12) onto the stand spring (5).
2. Attach the stand spring (5) to the stand (1) with eyebolt (5.4), fastening element (5.5) (pre-assembled), 2x with fastening element (6) and (7). Attach the eyebolt to the inner hole of the stand, note the alignment of the eyebolt.
3. Attach the stand spring (5) to the frame (14) with eyebolt (5.3), fastening element (5.5) (pre-assembled), 2x with fastening element (6) and (7). Attach the eyebolt to the inner hole of the frame, note the alignment of the eyebolt.

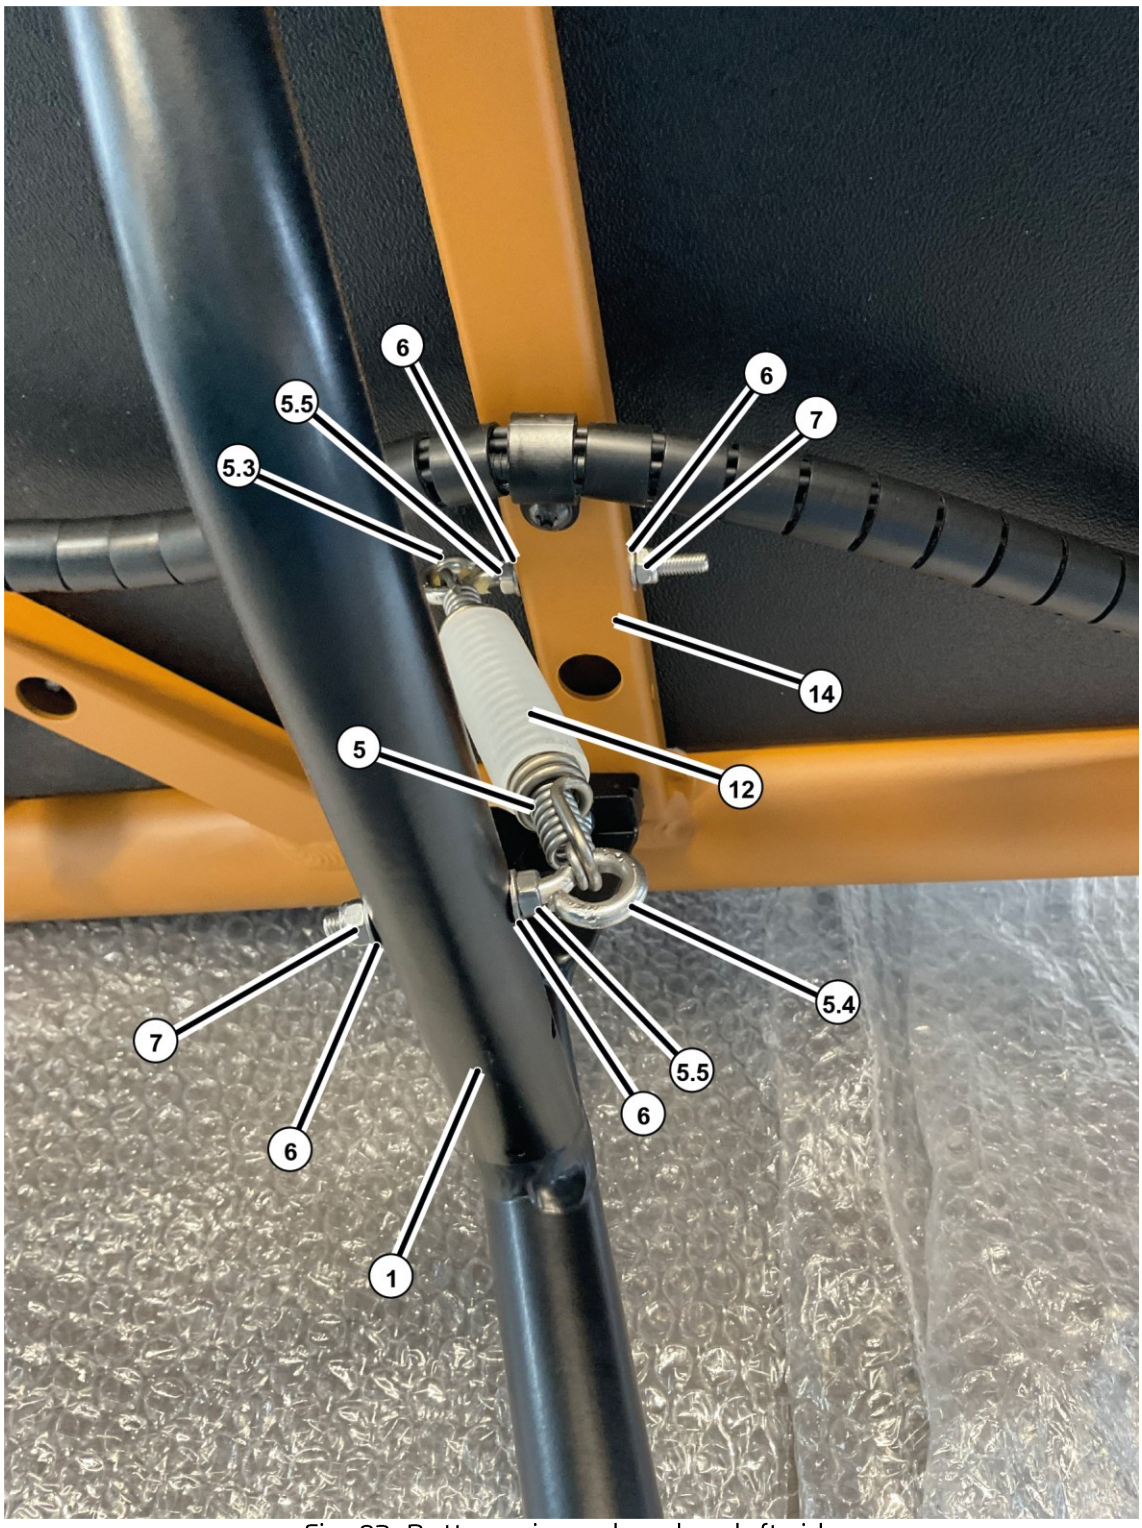

Fig. 03: Bottom view, placed on left side

Fitting the stand feet

1. Attach 2x spacers (10) to the stand (1) with knurled screws (11). Secure the knurled screw with Loctite.
2. Attach 2x stand shoe (2) to the stand (1).

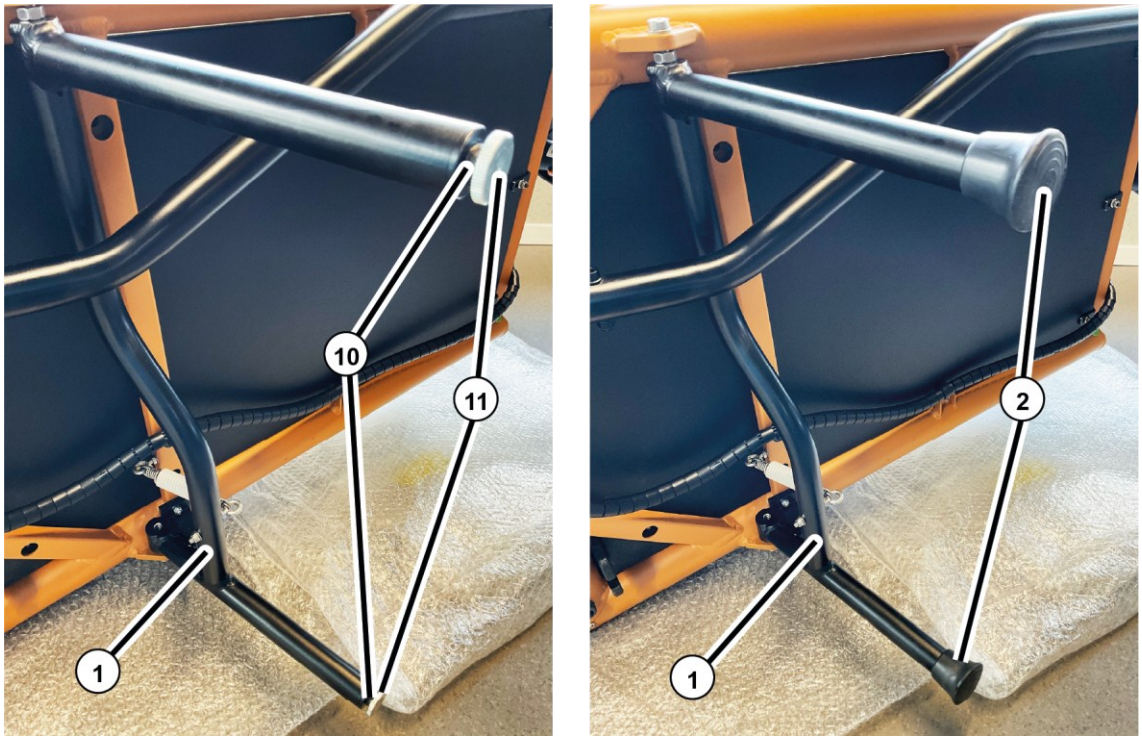

Fig. 06: Bottom view, placed on left side

Reinstallation

- Reattach the stand guard in reverse order of removal.