Gepäckträger

Art.-Nr. 233489 VBK0659 Stand: 07.10.2025

Montageanleitung Handel

HINWEIS
Die Montage Schutzblech Set Load darf nur von Fachpersonal durchgeführt werden.

Lieferumfang

Nr.	Benennung	Art.-Nr.	Anzahl
2	Gepäckträger 27,5" MIK HD 27kg Gewichtsfreigabe	231692	1x
3	Lower Rail Carrier	231957	1x



Abb. 01

(weiter nächste Seite)

Lieferumfang

Nr.	Benennung	Art.-Nr.	Anzahl
4	Spanngummi Gepäckträger Bibia TPE Länge 55cm (ohne Abb.)	231334	1x
6	O-Ring 53x2.5 mm EPDM 70 Shore A	233169	1x
8	Nutenstein M6 10x8x68,6	233096	2x
12	Halter Schutzblechstrebe Curana Apollo60 Stay Fixing Slider	230879	1x
13	Schutzblechstrebe HR1 Curana Orbit 70 black U-Stay, Länge 306,5mm, abgewinkelt	231699	1x
14	Schutzblechstrebe HR2 Curana Orbit 70 bl U-Stay Länge2 331,8 mm	232144	1x
15	Befestigung rechts Schutzblechstreben HR	232142	1x
16	Befestigung links Schutzblechstreben HR	232249	1x
17	Kabelkanal Curana Apollo 60 Cover Länge 250mm	231006	1x
18	Kabelkanal Curana Orbit einseitig Cable profile 455mm	232908	1x
19	Gummicover GT-Anbindung	230995	1x
20	Anleitung Gepäckträger VBK0659 (ohne Abb.)	233489	1x

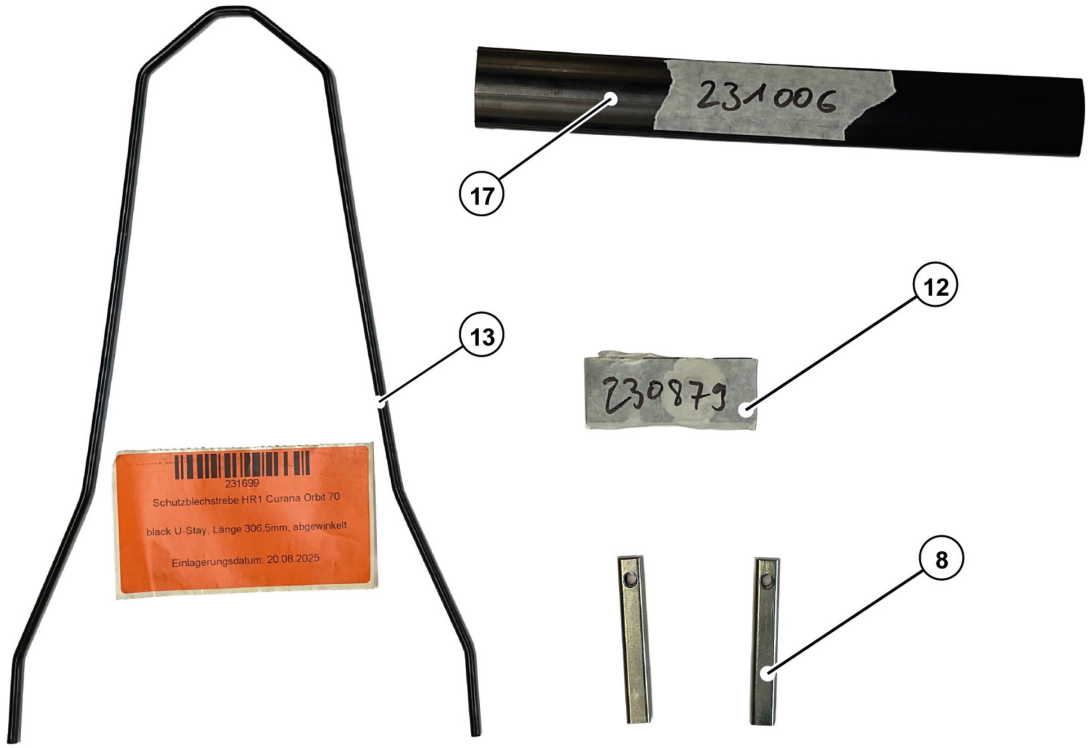


Abb. 02

(weiter nächste Seite)

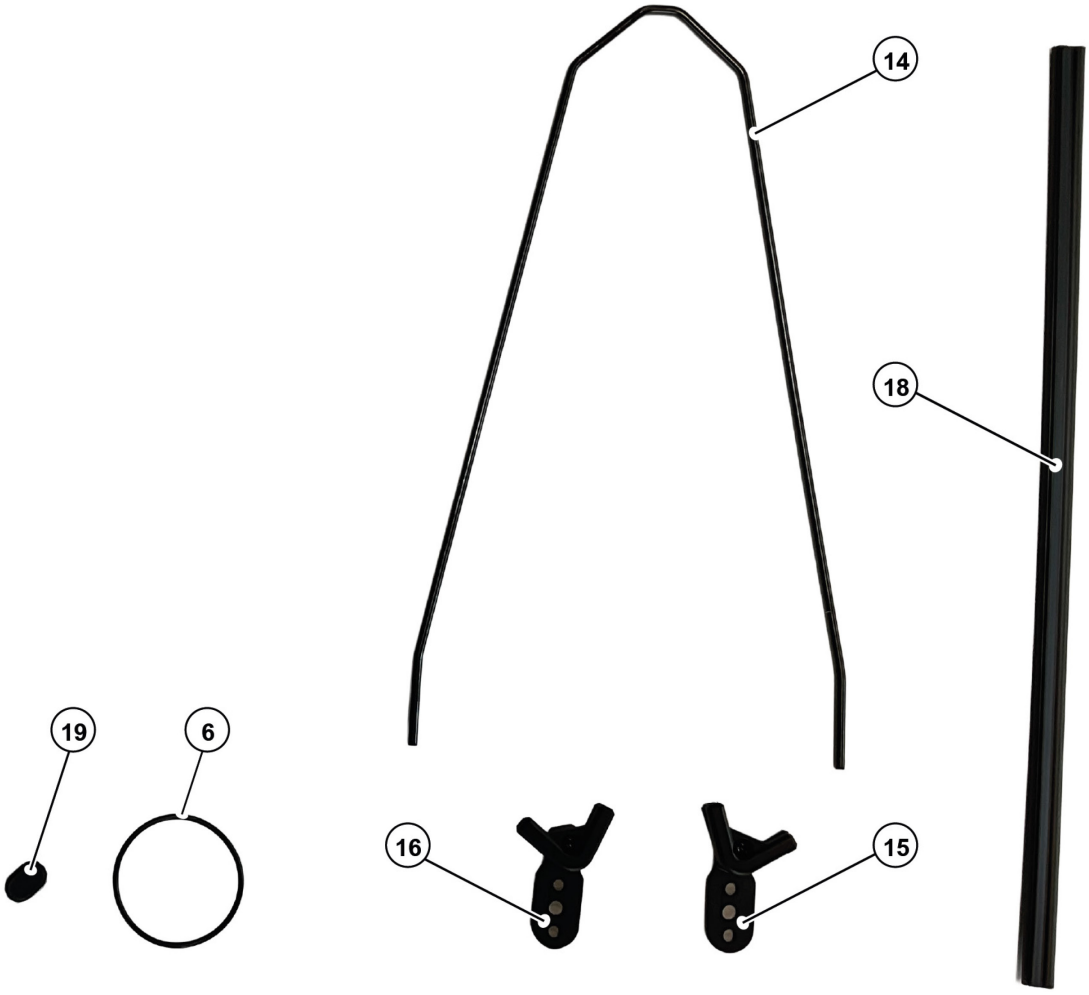


Abb. 03

Lieferumfang

Nr.	Benennung	Art.-Nr.	Anzahl
012	Linsenkopfschraube brüniert M5 x 16mm (48)	220746	4x
013	U-Scheibe M5 klein d=5.3mm Brüniert DIN 125 A2 (4)	190943	4x
014	Linsenkopfschraube M6x25 TX 30 brüniert (250)	211213	2x
015	Zylinderkopfschraube M8x80mm TX45 A2 Pol (145)	232622	2x
021	Senkkopfschraube M 5 x 10 ISO 14581 A2 (202)	232612	1x
022	Unterlegscheibe D8.4 DIN 125 A2 schwarz (7)	210634	3x
023	Senkkopfschraube M 5 x 10 ISO 14581 A2 (202)	232612	4x
027	Linsenkopfschraube m. TX 30 M6x8/8 [224]	231371	2x

Ohne Abb.

Schutzblech Hinterrad

Voraussetzungen

- Riemen ist entspannt. bzw. Kette vom Antrieb entfernt.
- Hinterrad ist ausgebaut.
- Kabelkanal aus Schutzblech entfernt.
- Rücklicht-Anschluss ist von Lichtkabel-Fahrzeug getrennt.
- Kabelschlauch ist von Lichtkabel-Fahrzeug abgezogen.
- Ggf.: Licht mit Licht-Halter-Schutzblech ist entfernt (zum Wiedereinbau aufbewahren).
- Ggf.: Reflektor ist entfernt (zum Wiedereinbau aufbewahren).
- Ggf. Rücklicht mit Kennzeichenhalter HS ist entfernt (zum Wiedereinbau aufbewahren).
- Packtaschenhalter ist ausgebaut.
- Schutzblech ist entfernt (zum Wiedereinbau aufbewahren).

Fahrrad vorbereiten

1. 2x Blindschraube (027) am Rahmen befestigen.

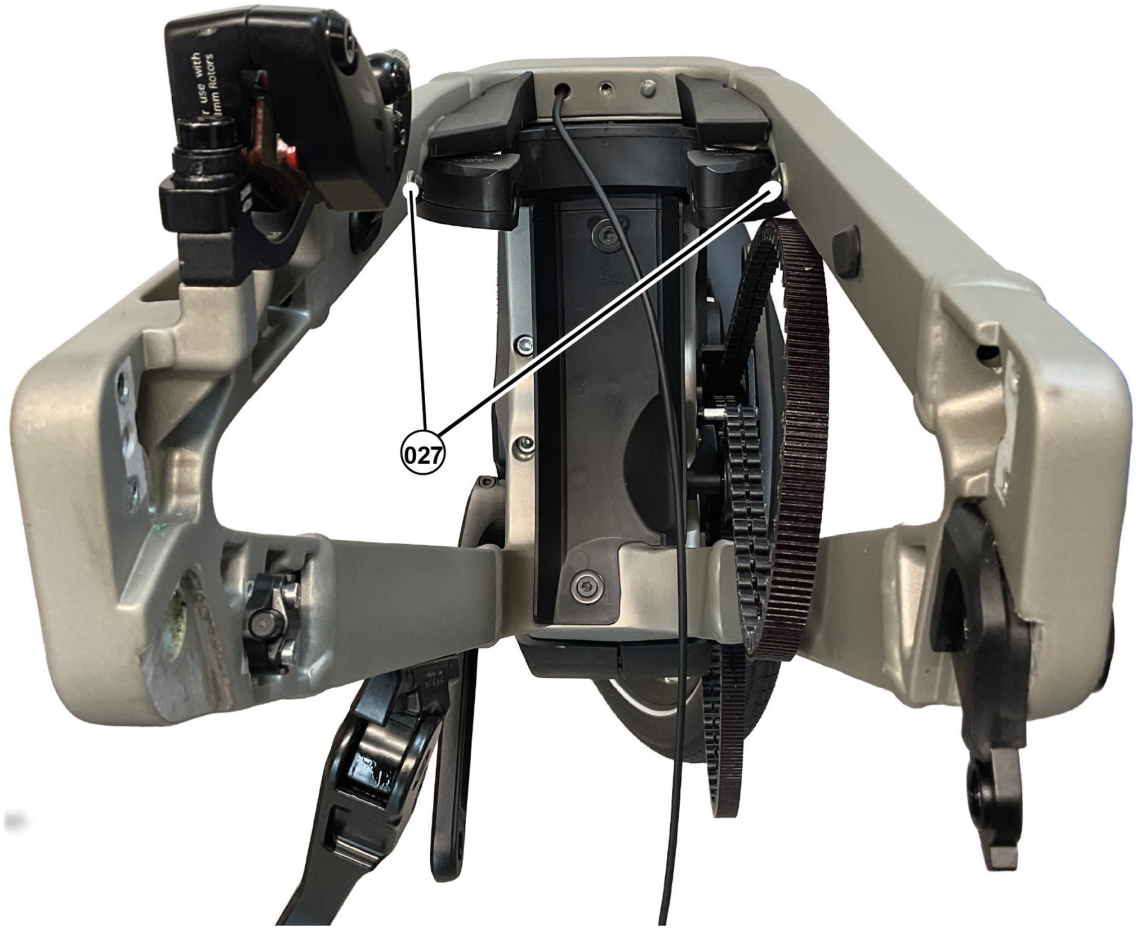


Abb. 04

(weiter nächste Seite)

2. 4x Befestigungselement (30) entfernen und Motorcover (31) öffnen. Befestigungselemente (30) zur Wiedermontage aufbewahren.

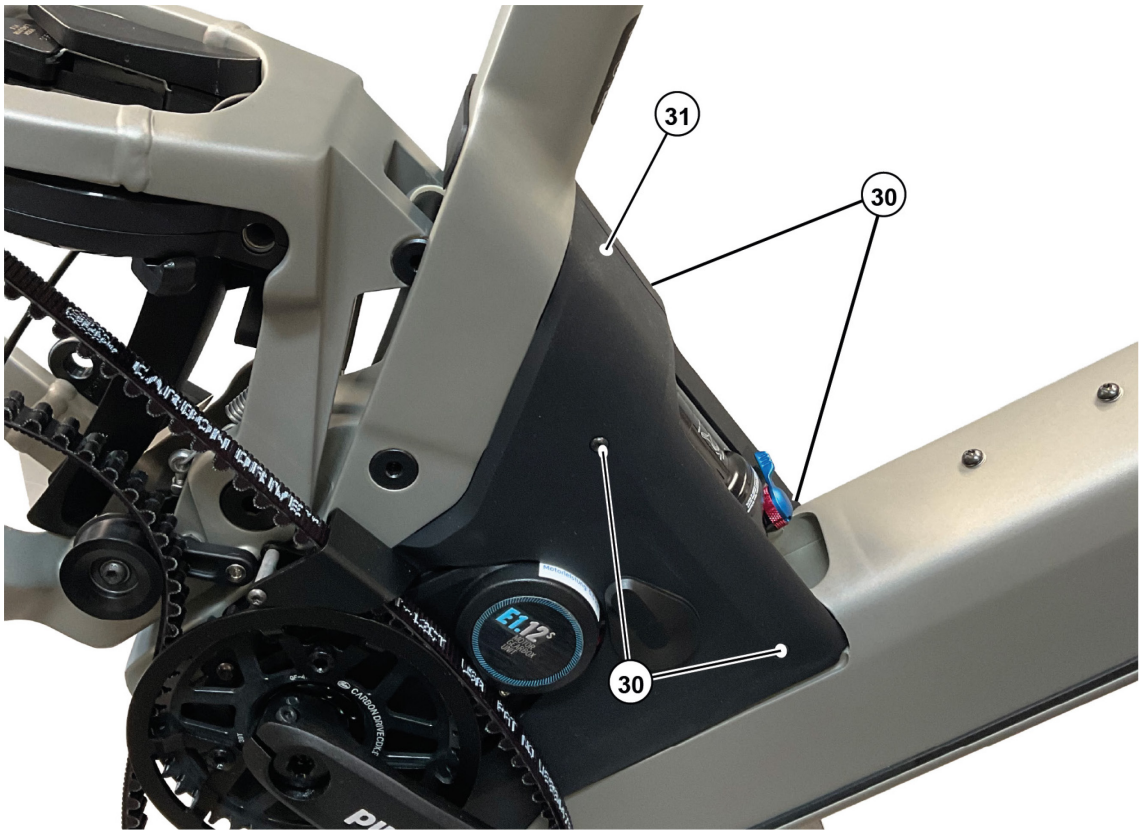


Abb. 05

3. Befestigungselemente (32) entfernen und Cover GPT Connection (33) abnehmen.

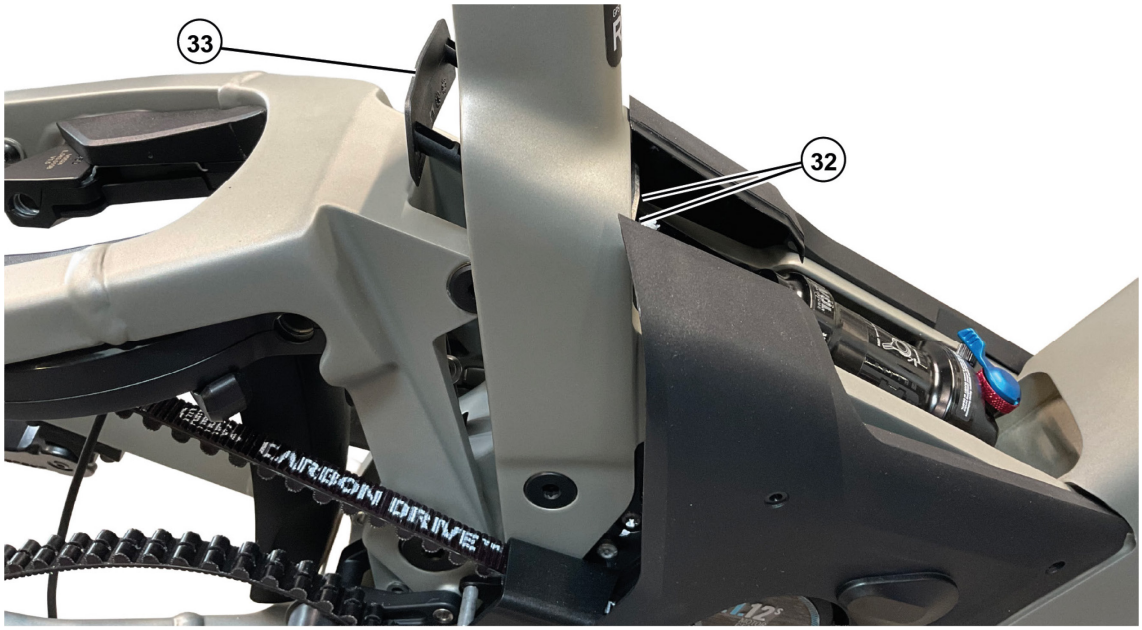


Abb. 06

4. Befestigungselement (34) lösen und Sattelklemme mit Abdeckung (35) entlang des Sattelrohrs nach oben schieben.
5. Befestigungselemente (36) entfernen und 2x Mutter (37) aus Rahmen entfernen.
6. 2x Nutenstein (8) in Rahmen einführen. Ausrichtung Gewinde Nutenstein (38) beachten, in Abhängigkeit von der Rahmengröße: Rahmengröße 56 (L): Gewinde Nutenstein zeigt nach unten; Rahmengröße 47 (S) / 51 (M): Gewinde Nutenstein zeigt nach oben.

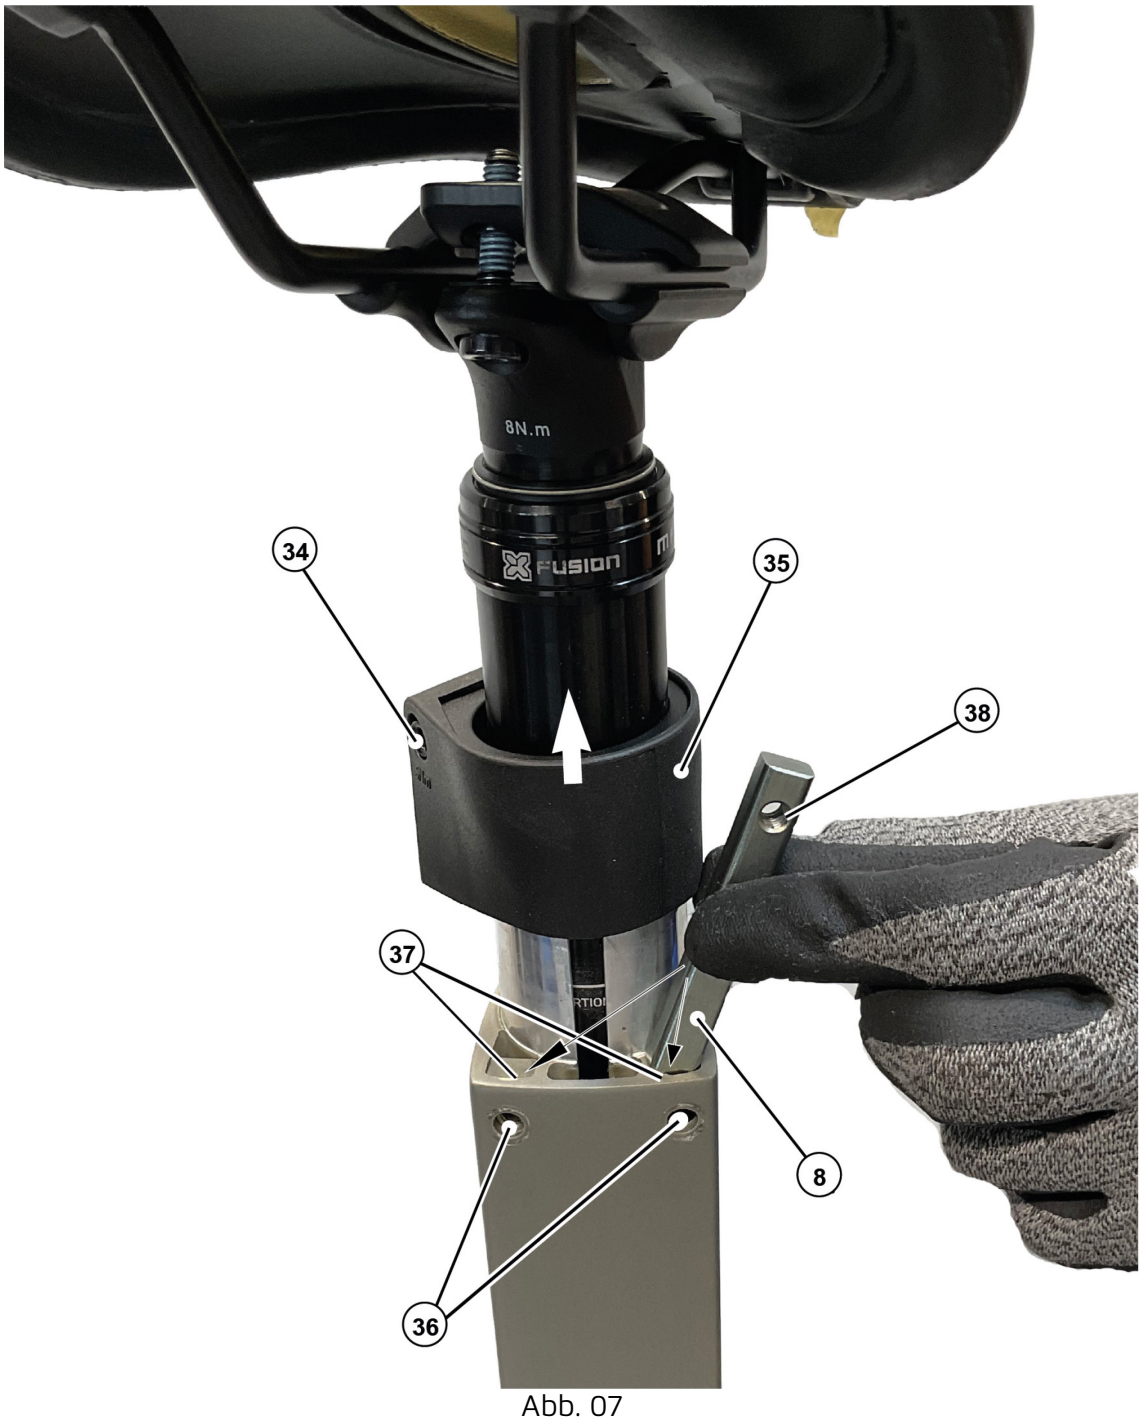


Abb. 07

Gepäckträger vorbereiten

1. Lower Rail Carrier (3) auf Gepäckträger (2) positionieren und mit Befestigungselementen (012) und (013) befestigen.
2. O-Ring (6) am Gepäckträger (2) befestigen.
3. Spanngummi (4) am Lower Rail Carrier (3) befestigen.

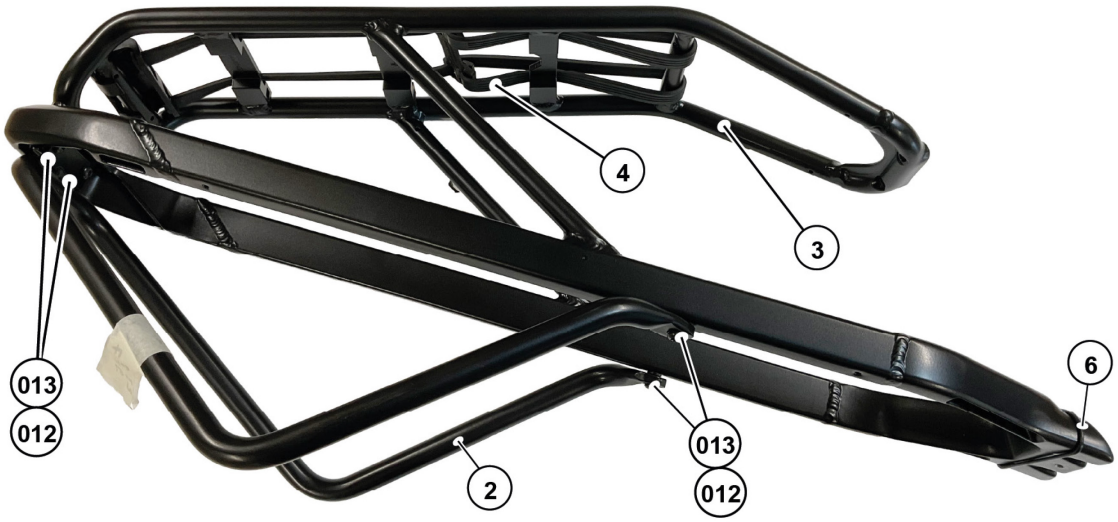


Abb. 08

Gepäckträger vollst. befestigen

1. Gepäckträger, vollst. (39) am Rahmen positionieren und 2x mit Befestigungselemente (014) sowie 2x mit Befestigungselement (015) befestigen. Ausrichtung Platte (40) beachten (Wiedermontage). Anzugsmoment Befestigungselement (014) und (015): 10 Nm.
2. O-Ring (6) soweit in Pfeilrichtung Richtung Rahmen verschieben, bis O-Ring (6) bündig an Rahmen anliegt.
3. Sattelklemme mit Abdeckung (35) wieder in Ausgangsposition bringen und mit Befestigungselement (34) befestigen. Anzugsmoment: 5 Nm.

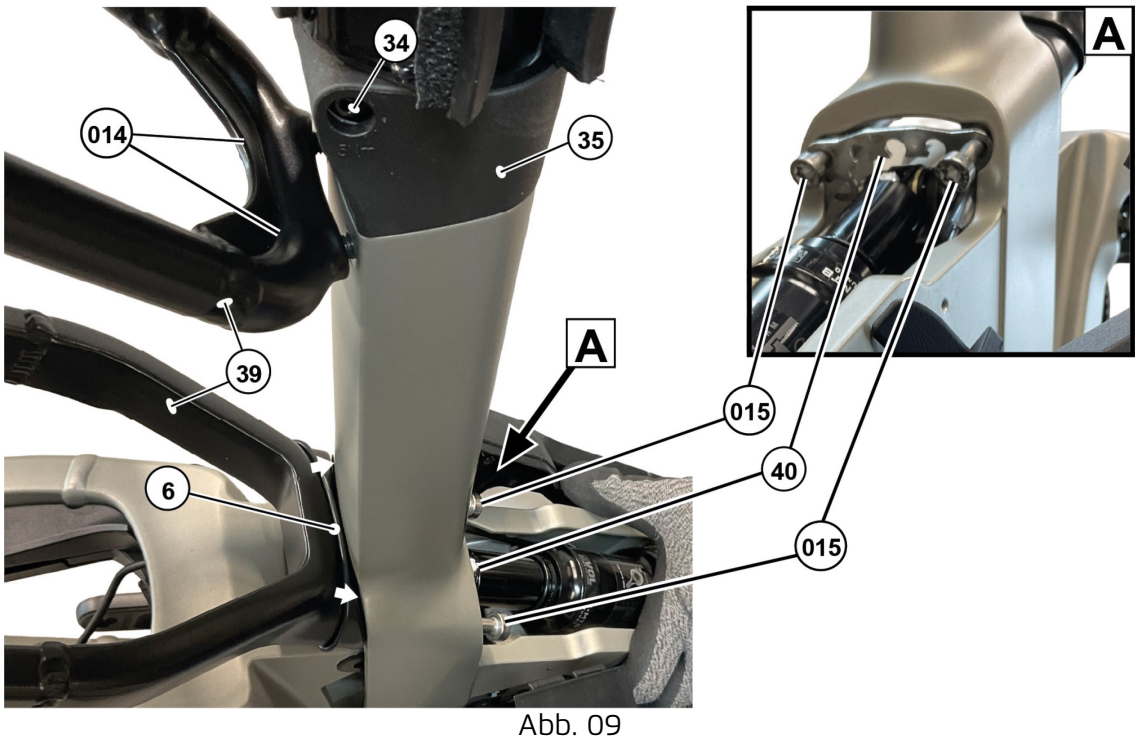


Abb. 09

Schutzbleche vorbereiten.

1. Schutzblechstrebe (13 und (14) mit einem 2 cm langen Streifen Tape (41) (nicht im Lieferumfang enthalten) in der Biegung umwickeln.

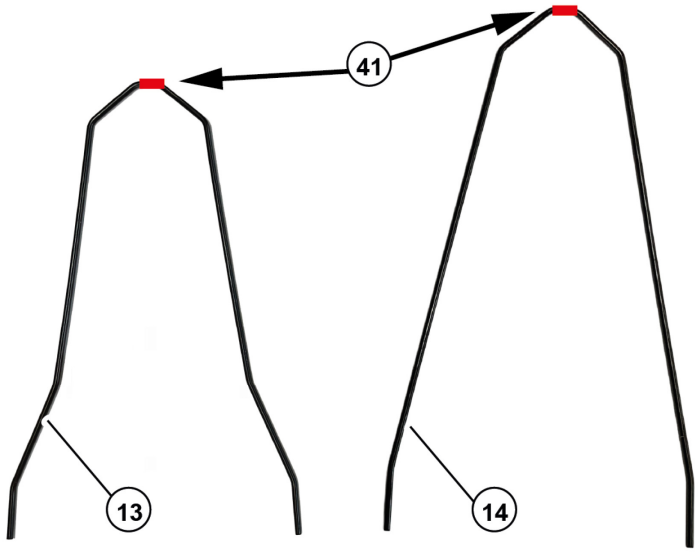


Abb. 10

2. Schutzblechstrebe (13) mit Halter-Schutzblechstrebe (12) in Schutzblech einschieben und hinter Langloch (42) positionieren (nach Augenmaß). Ausrichtung Halter-Schutzblechstrebe (12) beachten.
3. Schutzblechstrebe (14) mit Schutzblechabschluss (43) (Wiedereinbau) bis zum Anschlag in Schutzblech einschieben.
4. Befestigung Schutzblechstrebe, rechts (15) und Befestigung Schutzblechstrebe, links (16) auf Schutzblechstrebe (13) und (14) aufstecken und mit Befestigungselement (028) befestigen.
5. Halter-Schutzblech (12) anziehen.
6. Langloch (42) mit Gummicover (19) von außen verschließen.

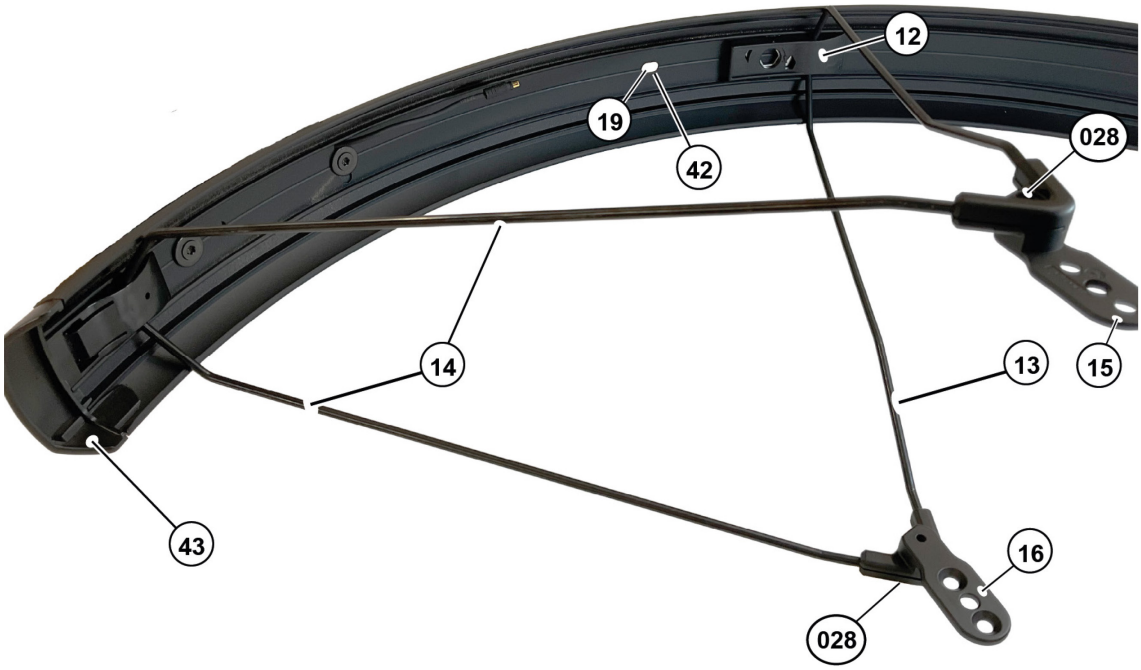


Abb. 11

Wiedereinbau Anbauteile Schutzblech

Der Wiedereinbau der Anbauteile Schutzblech erfolgt in Umgekehrter Reihenfolge des Ausbaus.
In Abhängigkeit der Ausstattungsvariante wieder einbauen:

- Licht mit Licht-Halter-Schutzblech und Reflektor einbauen (Wiedereinbau).
- Rücklicht mit Kennzeichenhalter HS einbauen (Wiedereinbau).

Wiedereinbau Schutzblech

1. Lichtkabel-Fahrzeug (44) in Schutzblech einfädeln.
2. Schutzblech am E-Bike positionieren und 4x mit Befestigungselement (021), Anzugsmoment: 4 Nm und Befestigungselementen (021) und (022) befestigen.
3. Lichtkabel-Fahrzeug (44) in Kabelkanal (18) einfädeln und durchziehen.
4. Kabelkanal (18) mit Lichtkabel-Fahrzeug auf der linken Seite in Schutzblech einklippsen.
5. Lichtkabel-Fahrzeug (44) mit Rücklicht (45) verbinden.
6. Kabelkanal (17) in Schutzblech einklippsen.

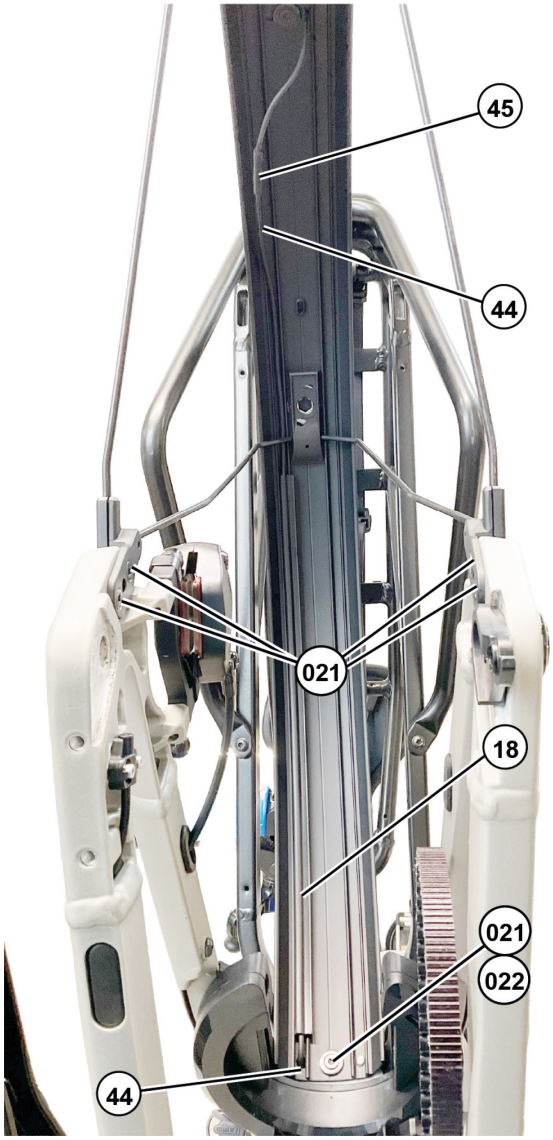


Abb. 12

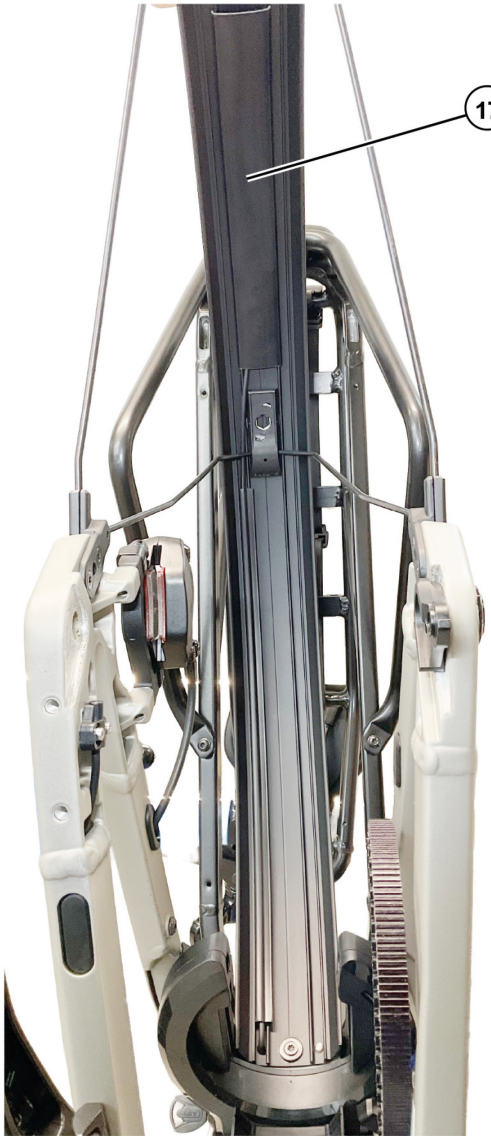


Abb. 13

Wiedereinbau

Der Wiedereinbau erfolgt in umgekehrter Reihenfolge des Ausbaus.

- Hinterrad einbauen.
- Riemen einbauen und spannen, bzw. Kette einbauen.

Einstellungen prüfen

- Freilauf Hinterrad prüfen.
- Schutzblech ggf. einstellen.
- Bremssattel ggf. einstellen.

Luggage carrier

Art.-No. 233489 VBK0659; Dated: 07.10.2025

Dealer Assembly instruction

NOTICE

Only allow qualified personnel to assemble the luggage carrier.

Scope of delivery

No.	Part name	Art.-no.	Number of parts
2	Luggage carrier 27.5" MIK HD 27kg weight release	231692	1x
3	Lower Rail Carrier	231957	1x

Overview of parts



Fig. 01

(continued on next page)

Scope of delivery

No.	Part name	Art.-no.	Number of parts
4	Elasticated luggage carrier Bibia TPE length 55cm (not shown)	231334	1x
6	O-ring 53x2.5 mm EPDM 70 Shore	233169	1x
8	Slot nut M6 10x8x68.6	233096	2x
12	Bracket for mudguard stay Curana Apollo60 Stay Fixing Slider	230879	1x
13	Mudguard stay HR1 Curana Orbit 70 black U-Stay, length 306.5mm, angled	231699	1x
14	Mudguard stay HR2 Curana Orbit 70 bl U-Stay length2 331.8 mm	232144	1x
15	Fastening right mudguard stay HR	232142	1x
16	Fastening left mudguard stay HR	232249	1x
17	Cable duct Curana Apollo 60 Cover length 250mm	231006	1x
18	Cable duct Curana Orbit one-sided Cable profile 455mm	232908	1x
19	Rubber cover GT connection	230995	1x
20	Luggage carrier instructions VBK0659 (not shown)	233489	1x

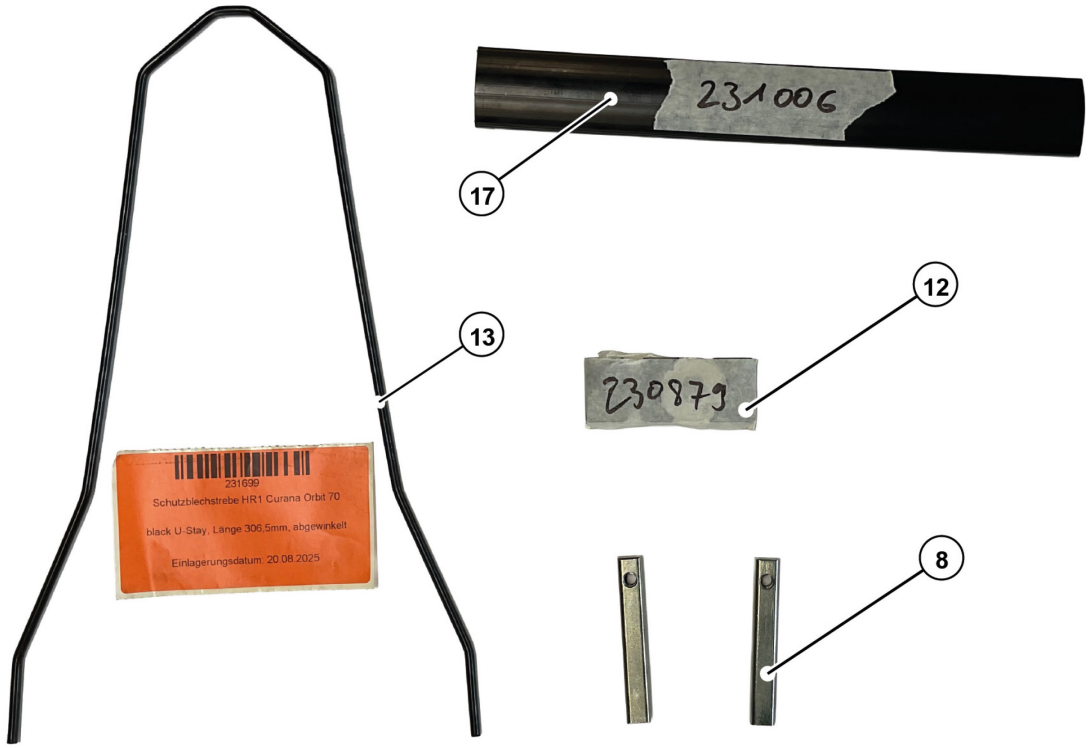


Fig. 02

(continued on next page)

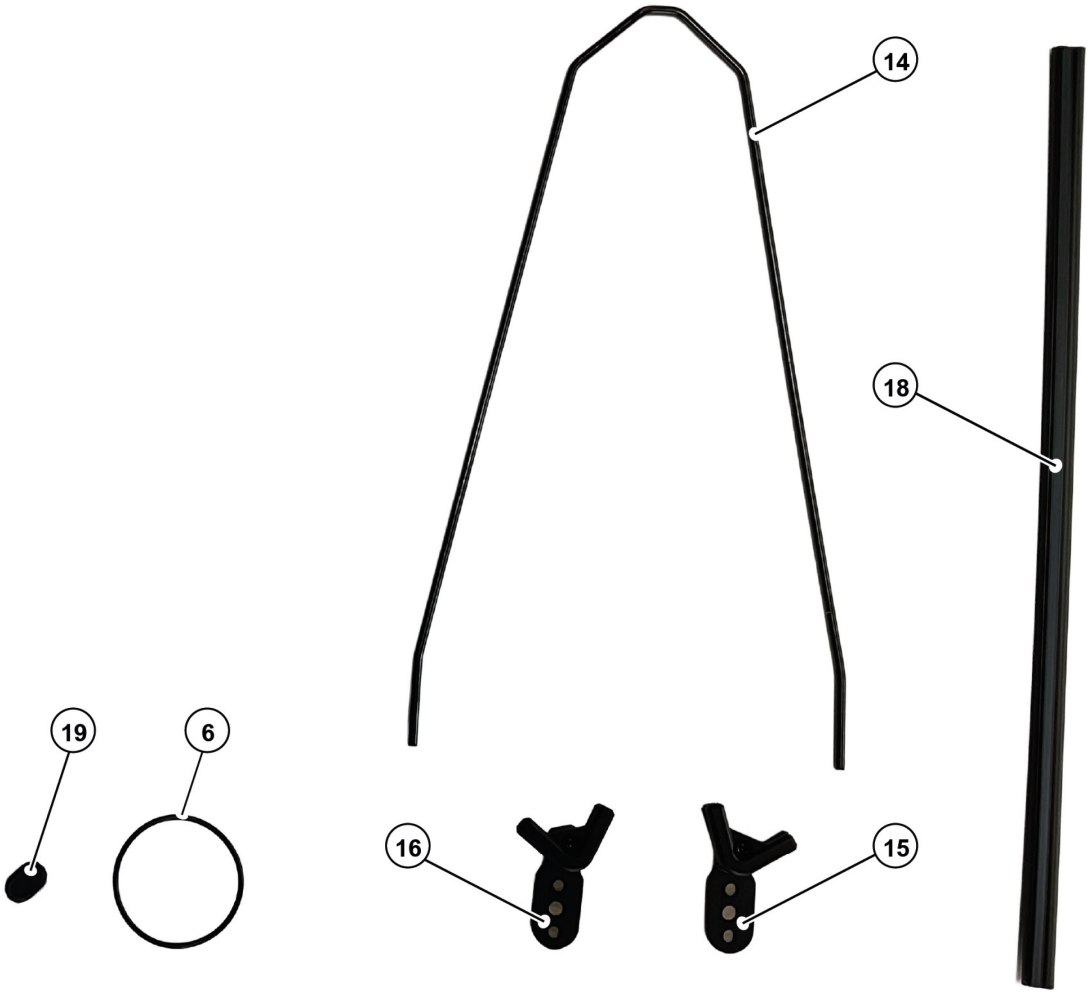


Fig. 03

Scope of delivery

No.	Part name	Art.-no.	Number of parts
012	Pan head screw burnished M5 x 16mm (48)	220746	4x
013	Washer M5 small d=5.3mm burnished DIN 125 A2 (4)	190943	4x
014	Pan head screw M6x25 TX 30 burnished (250)	211213	2x
015	Cylinder head screw M8x80mm TX45 A2 Pol (145)	232622	2x
021	Countersunk head screw M5 x 10 ISO 14581 A2 (202)	232612	1x
022	Washer D8.4 DIN 125 A2 black (7)	210634	3x
023	Countersunk head screw M 5 x 10 ISO 14581 A2 (202)	232612	4x
027	Countersunk head screw with TX 30 M6x8/8 [224]	231371	2x

Not shown

Rear mudguard

Requirements

- The belt is slack or the chain is removed from the drive.
- Rear wheel is removed.
- Cable duct removed from mudguard.
- Rear light connection is disconnected from light cable vehicle.
- Cable conduit is disconnected from light cable vehicle.
- If applicable: Light with light holder mudguard has been removed (keep for reassembly.).
- If applicable: Reflector has been removed (keep for reinstallation).
- If applicable: Rear light with licence plate holder HS has been removed (keep for reassembly.).
- Pannier holder has been removed.
- Mudguard has been removed (keep for reassembly.).

Prepare the bike

1. Fasten 2x blind screw (027) to the frame.

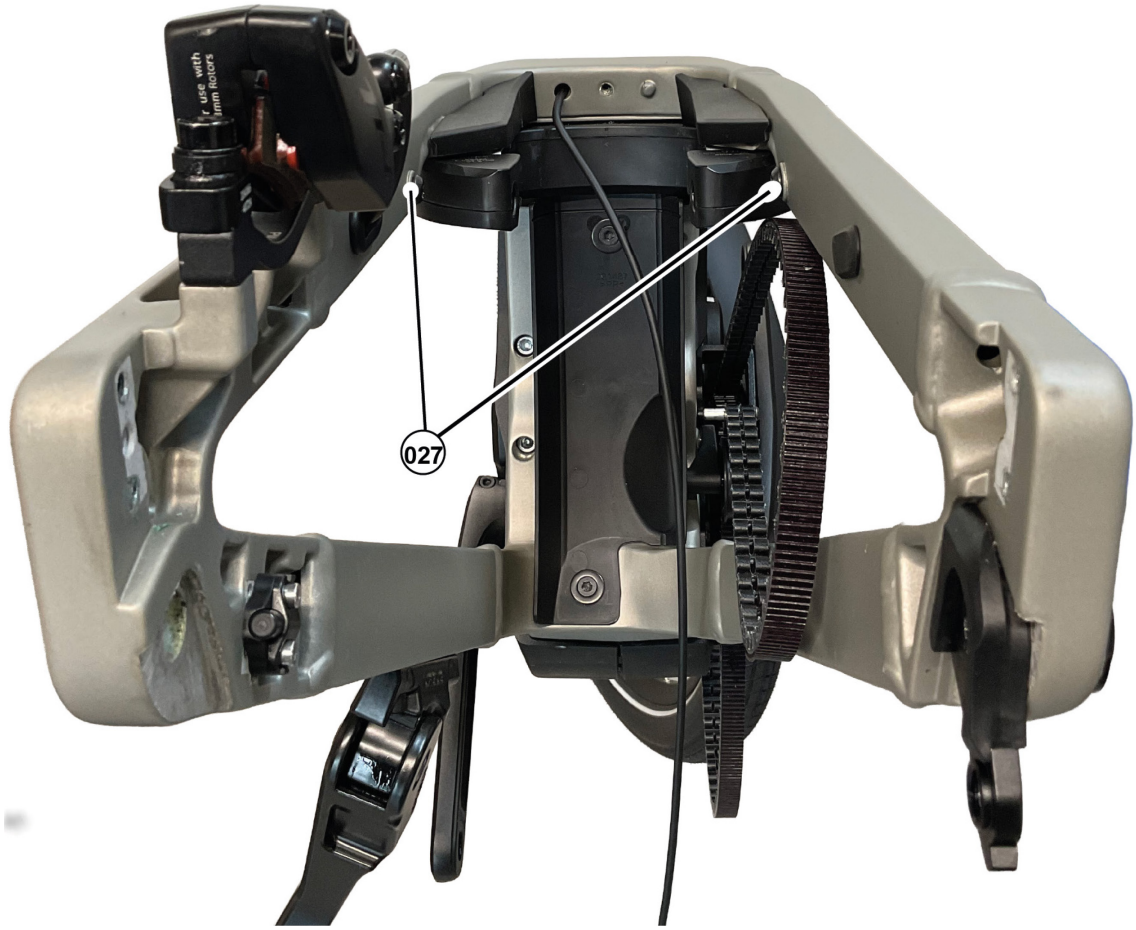


Fig. 04

(continued on next page)

2. Remove 4x fastening element (30) and open motor cover (31). Keep the fastening elements (30) for reassembly.

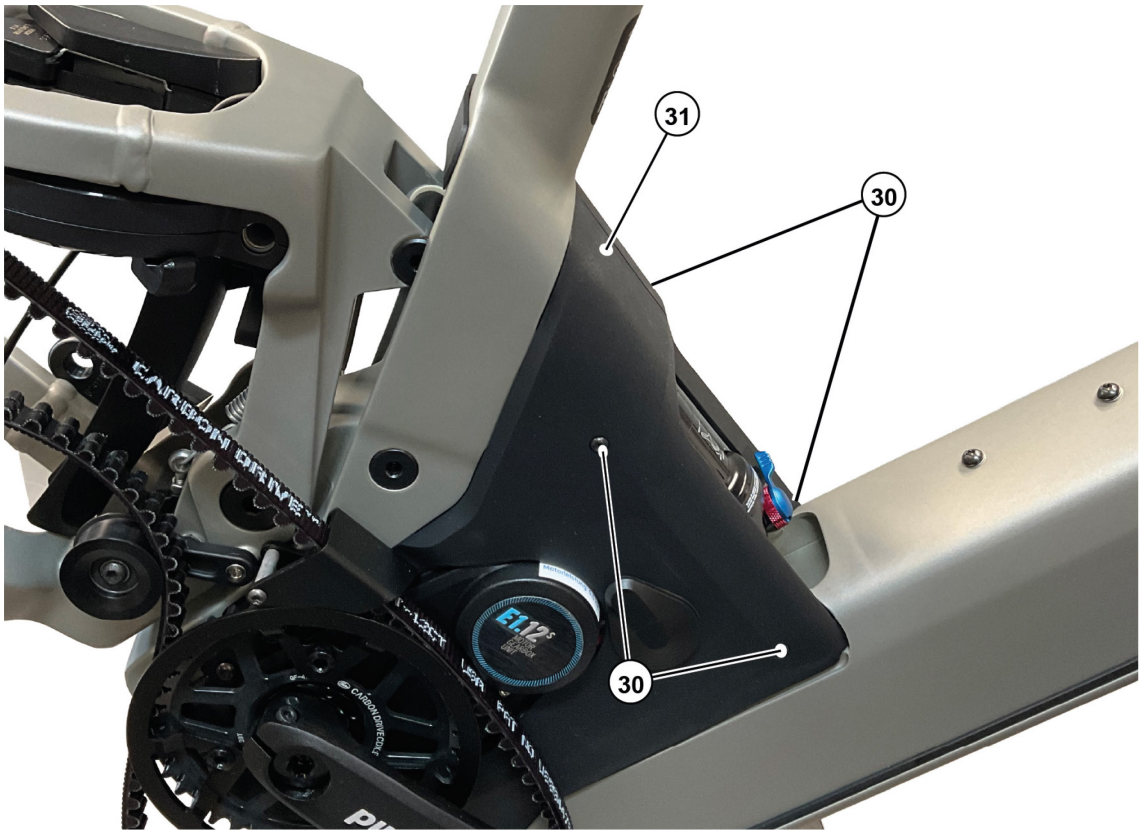


Fig. 05

3. Remove the fastening elements (32) and remove the GPT Connection cover (33).

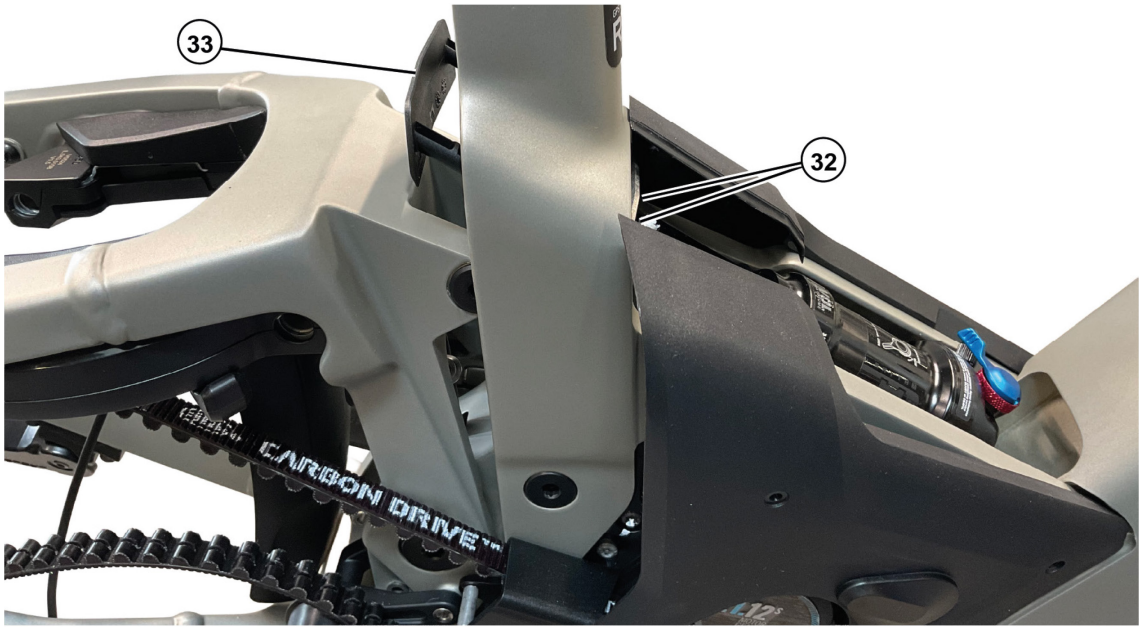


Fig. 06

4. Loosen the fastening element (34) and slide the seat clamp with cover (35) upwards along the seat tube.
5. Remove the fastening elements (36) and remove 2x nut (37) from the frame.
6. Insert 2x slut nut (8) into frame. Note the alignment of the threaded slot nut (8), depending on the frame size: Frame size 56 (L): Threaded slot nut points downwards; Frame size 47 (S) / 51 (M): Threaded slot nutpoints upwards.



Fig. 07

(continued on next page)

Preparing the luggage carrier

1. Position the lower rail carrier (3) on the luggage carrier (2) and fasten with fastening elements (012) and (013).
2. Fasten the O-ring (6) to the luggage carrier (2).
3. Attach the elasticated luggage carrier (4) to the lower rail carrier (3).

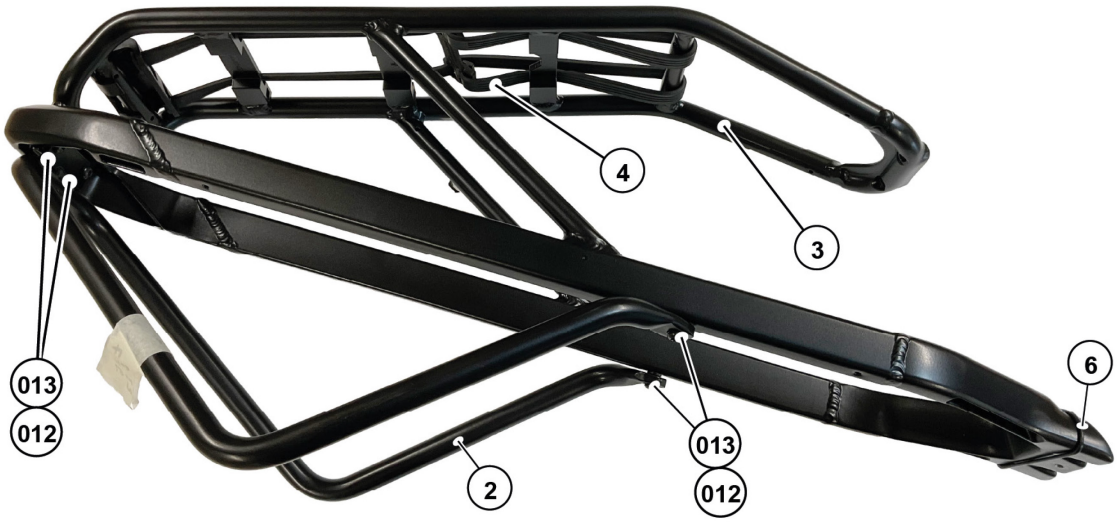


Fig. 08

Fasten luggage carrier completely

1. Position luggage carrier, complete (39) to the frame and fasten 2x with fastening elements (014) and 2x with fastening element (015). Note the alignment of the plate (40) (reassembly). Tightening torque of fastening element (014) and (015): 10 Nm.
2. Move the O-ring (6) in the direction of the arrow towards the frame until the O-ring (6) is flush with the frame.
3. Return the saddle clamp with cover (35) to its original position and secure with the fastening element (34). Tightening torque: 5 Nm.

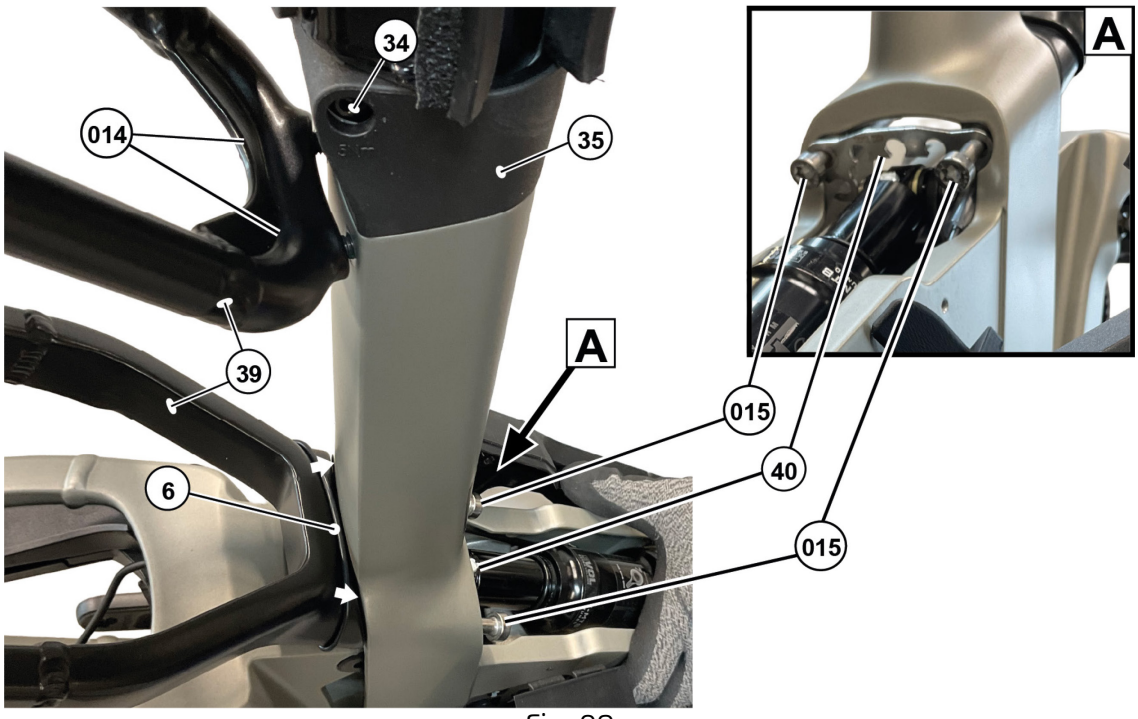


Fig. 09

Prepare the mudguards.

1. Wrap a 2 cm long strip of tape (41) (not included) around the bend of the mudguard strut (13 and (14).

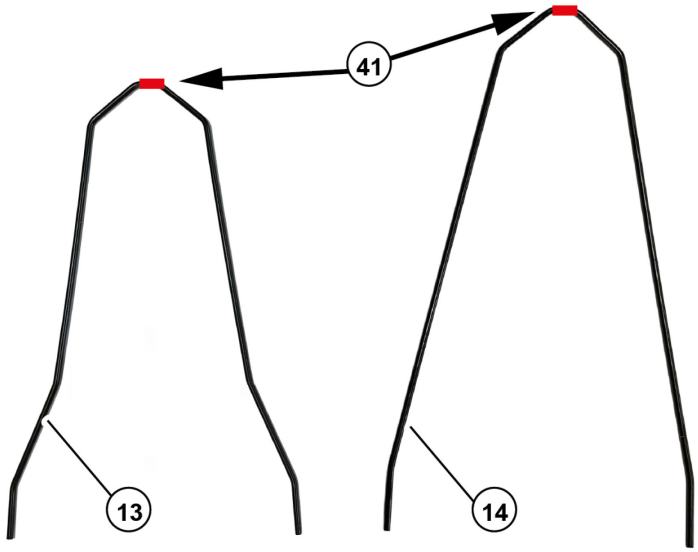


Fig. 10

2. Slide mudguard stay (13) with bracket for mudguard stay (12) into mudguard and position behind slotted hole (42) (by eye). Note the alignment of the bracket for mudguard stay (12).
3. Push mudguard stay (14) with mudguard end (43) (reassembly) into mudguard as far as it will go.
4. Push the mudguard stay attachment, right (15) and mudguard stay attachment, left (16) onto the mudguard stay (13) and (14) and fasten with fastening element (028).
5. Tighten the bracket for mudguard stay (12).
6. Seal the slotted hole (42) with rubber cover (19) from the outside.

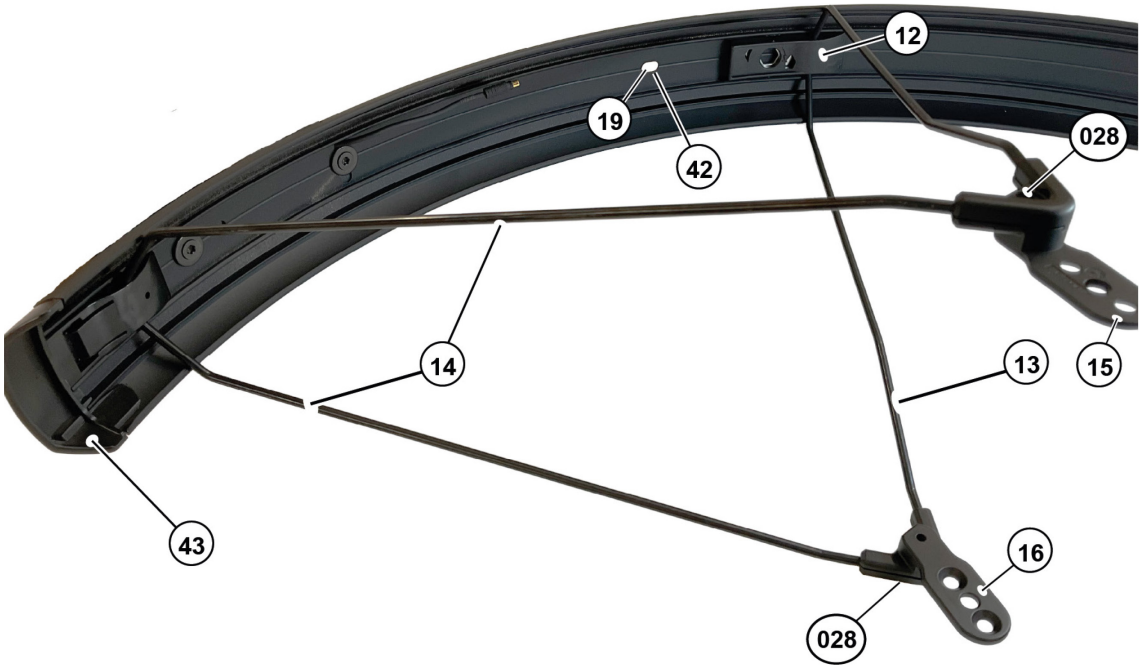


Fig. 11

Refitting the mudguard attachments

The fender attachment parts are reinstalled in the reverse order of removal.
Reinstall depending on the equipment variant:

- Install light with light holder mudguard and reflector (reassembly).
- Install rear light with HS licence plate holder (reassembly).

Refitting the mudguard

1. Thread the vehicle light cable (44) into the mudguard.
2. Position mudguard on e-bike and fasten 4x with fastening element (021), Tightening torque: 4 Nm and fastening elements (021) and (022).
3. Thread the vehicle light cable (44) into the cable duct (18) and pull through.
4. Clip the cable duct (18) with the vehicle light cable into the mudguard on the left-hand side.
5. Connect vehicle light cable (44) to rear light (45).
6. Clip the cable duct (17) into the mudguard.

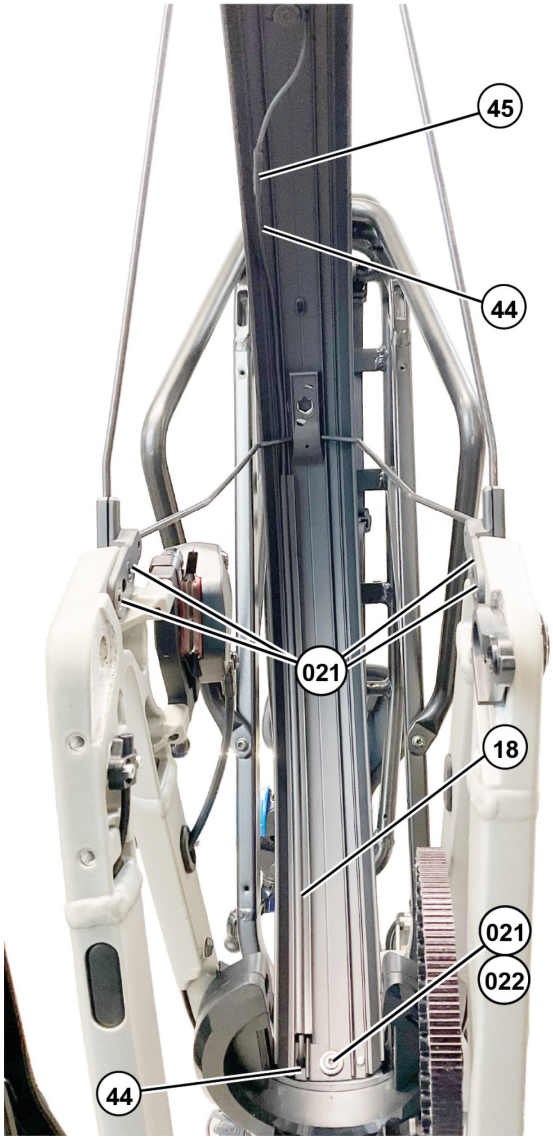


Fig. 12

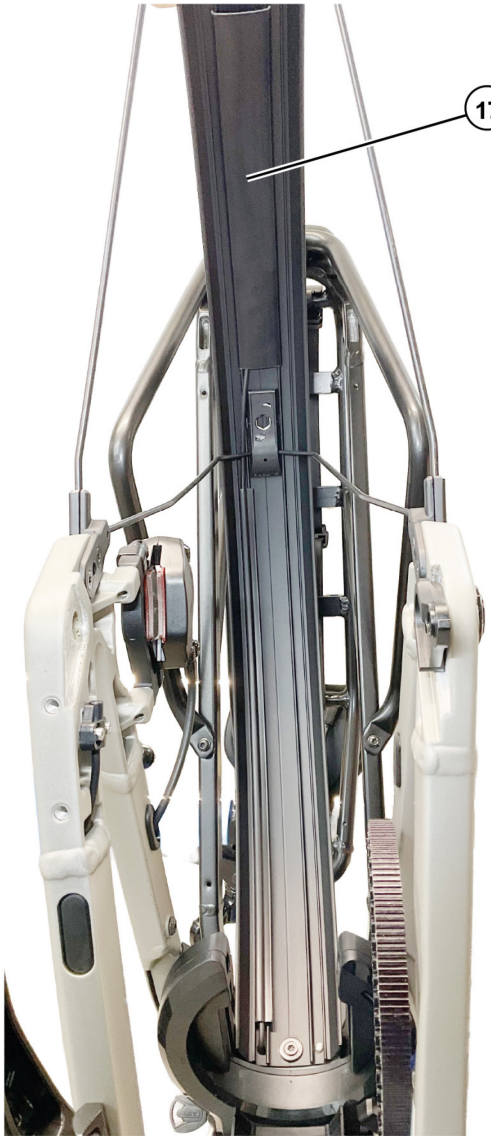


Fig. 13

Reinstallation

Reinstallation is carried out in the reverse order of removal.

- Install the rear wheel.
- Install and tension the belt or install the chain.

Check settings

- Check rear wheel freewheel.
- Adjust mudguard if necessary.
- Adjust brake calliper if necessary.