Packster 60/80 STÄNDER BREIT (VBK0272)

Der breite Ständer passt an Packster 60/80 aller Modelljahre,

Stand: 14.10.2019 15:30:00

Lieferumfang

- **1x** Ständer breit ohne Anbauteile
- **2x** Rändelschraube (M6x20/20 DIN 653)
- **4x** Ständerschuh außen (2x als Ersatz bei Verschleiß)
- **2x** Gleitlager Iglidur
- **1x** Hülsenmutter
- **1x** Ösenschraube M5x40
- **1x** U-Scheibe (d = 5,3mm DIN 125 A2)
- **1x** Mutter (M5 DIN 934 A2
- **2x** Silentblock, d=20mm, h=10mm
- **1x** Ständeranschlag
- **2x** Ständerfeder mit Silikonschlauch, l=50mm

Ständer montieren

1. Rändelschrauben ① festschrauben und Ständerschuhe ② aufschieben (Abb. 1).
2. Gleitlager ③ von innen einpressen. Vorhandene Schrauben ④, U-Scheiben ⑤ und Muttern ⑥ vormontieren.
3. Ösenschraube ⑦, Mutter M5 ⑧, U-Scheibe 5,2mm ⑨ und Hülsenmutter ⑩ montieren (Abb. 2). Silentblöcke d=20mm ⑪ montieren (Abb. 2). Ständeranschlag ⑫ aufstecken (Abb. 3).
4. Schrauben ④ in Rahmen eindrehen und mit Muttern ⑥ gegen den Rahmen kontern (Abb. 4).
5. Federn ⑬ mit geeignetem Haken ⑭ in Ösenschraube einhängen (Abb. 5)

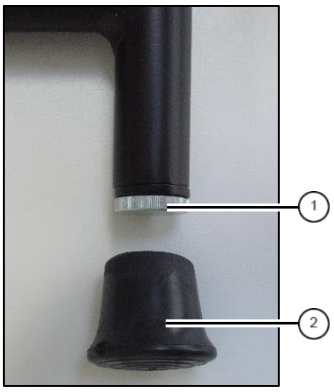

Abb. 1: Ständerschuhe

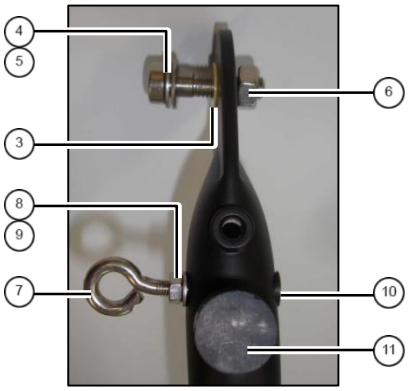

Abb. 2: Silentblock, Gleitlager, Ösenschraube

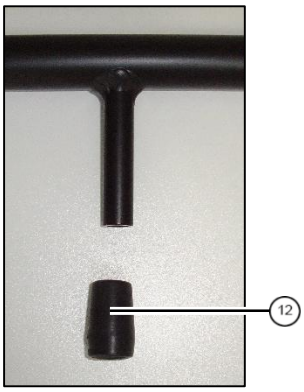

Abb. 3: Ständeranschlag

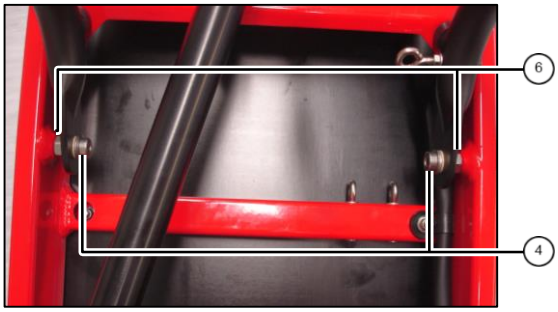

Abb. 4: Ständer montieren

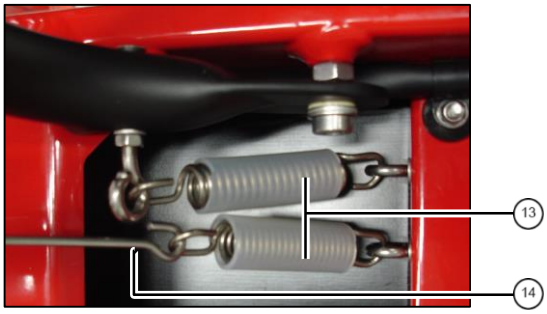

Abb. 5: Federn einhängen

Datei: VBK0272-P60-80-Ständer-breit-191014.docx

Packster 60/80 KICKSTAND WIDE (VBK0272)

The wide kickstand fits to all model years of Packster 60/80.

Stand:14.10.2019 15:30:00

Scope of delivery

- **1x** kickstand, wide
- **2x** knurled screw (M6x20/20 DIN 653)
- **4x** outer kickstand shoe (2x for replacement)
- **2x** bushing Iglidur
- **1x** sleeve nut
- **1x** ring bolt M5x40
- **1x** washer (d = 5,3mm DIN 125 A2)
- **1x** nut (M5 DIN 934 A2)
- **2x** silent block, d=20mm, h=10mm
- **1x** kickstand limiter
- **2x** spring with silicon tube, l=50mm

Kickstand Assembly

1. Tighten knurled screws ① and apply kickstand shoes ② (fig. 1).
2. Insert bushings ③ from inner side. Mount existing bolts ④, washers ⑤ and nuts ⑥ (fig. 2).
3. Assemble ring bolt ⑦, nut M5 ⑧, washer 5,2mm ⑨ and sleeve nut ⑩ (fig. 2).
   Assemble silent blocks d=20mm ⑪. Apply kickstand limiter ⑫ (fig. 3).
4. Insert bolts ④ into frame and tighten nuts ⑥ against frame (fig. 4).
5. Connect springs ⑬ with ring bolts by using appropriate hook ⑭ (fig. 5).

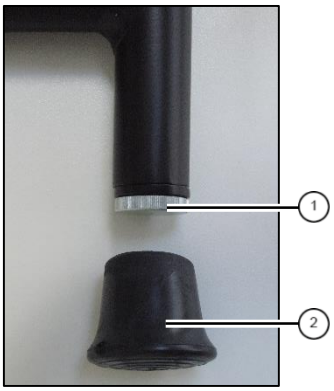

fig. 1: kickstand shoes

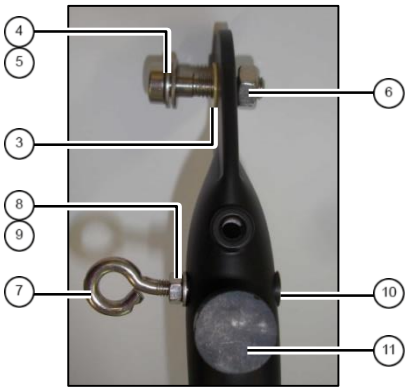

fig. 2: Silent blocks, bushings, ring bolts

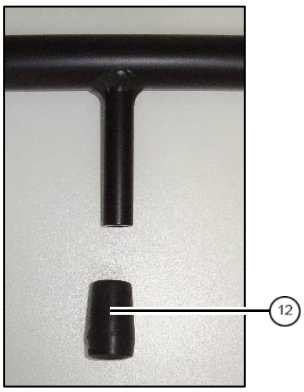

fig. 3: kickstand limiter

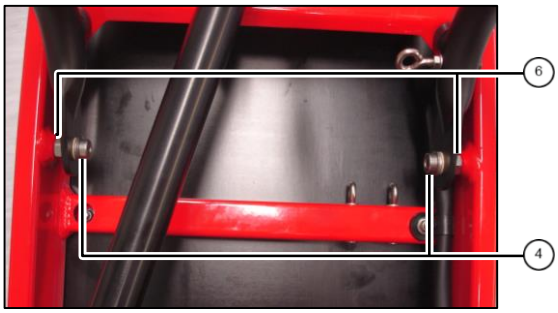

fig. 4: mounting kickstand

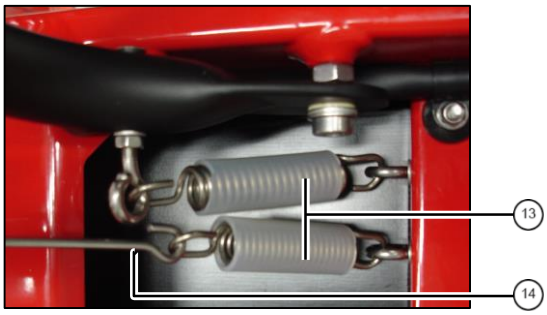

fig. 5: connect springs

Datei: VBK0272-P60-80-Ständer-breit-191014.docx