Ständerfüße für Cargo-Ständer (VBK0029)

Stand: 12.04.2019 16:20:00

Dies ist ein Set zum Ersetzen von verschlissenen Ständerfüßen.

Lieferumfang

- **2x** Ständerstopfen
- **2x** Ständerschuh außen
- **2x** Mutter M6 SW13
- **2x** Rändelschraube

Montage

1. Vorhandene Ständerschuhe ② abziehen (Abb. 1).
2. Ständerstopfen ① aufklappen und vorhandene Muttern durch Muttern M6 SW13 ③ ersetzen (Abb. 2). Ständerstopfen wieder zuklappen.
3. Falls nötig, Ständerstopfen ① in Ständerenden eindrücken (Abb. 3, nicht nötig bei Ständern mit eingeschweißtem Gewinde).
4. Rändelschrauben festdrehen (Abb. 3).
5. Neue Ständerschuhe ② aufschieben (Abb. 1).



Abb. 1: Ständerschuhe

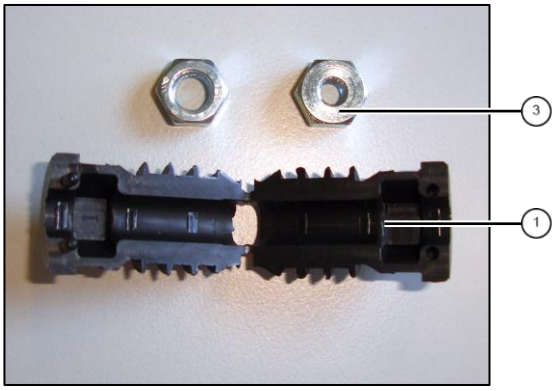


Abb. 2: Ständerstopfen

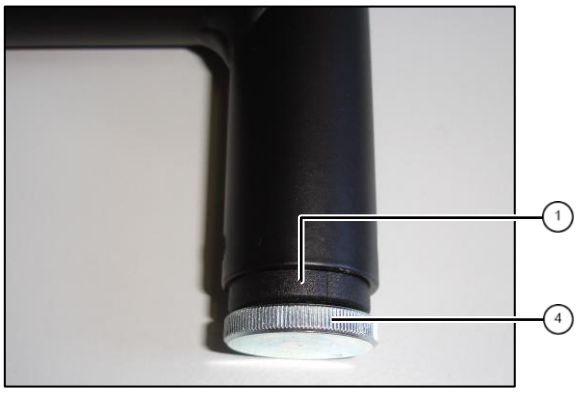


Abb. 3: Ständerstopfen und Rändelschraube

Datei: VBK0029-Staenderfuesse-180420.docx

Feet for Cargo-Bike Kickstands (VBK0029)

Stand: 12.04.2019 16:20:00

This is a set to replace worn out kickstand feet.

Scope of Delivery

- **2x** kickstand plug
- **2x** kickstand foot
- **2x** nut M6 SW13
- **2x** knurled screw

Mounting the Kickstand Feet

1. Remove existing kickstand feet ② (fig. 1).
2. Open Kickstand plug ①, remove existing nut and insert nut M6 SW13 ③ (fig. 2).
   Close kickstand plug.
3. If necessary insert kickstand plug ① into kickstand ends (fig. 3, not necessary at kickstands with welded thread inserts).
4. Tighten knurled screw (fig. 3).
5. Install new kickstand feet ② (fig. 1).



fig. 1: kickstand foot

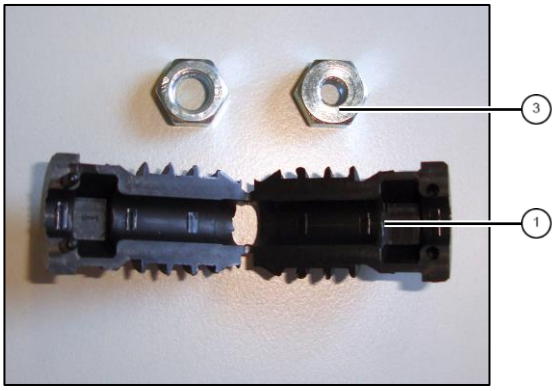


fig. 2: kickstand plug

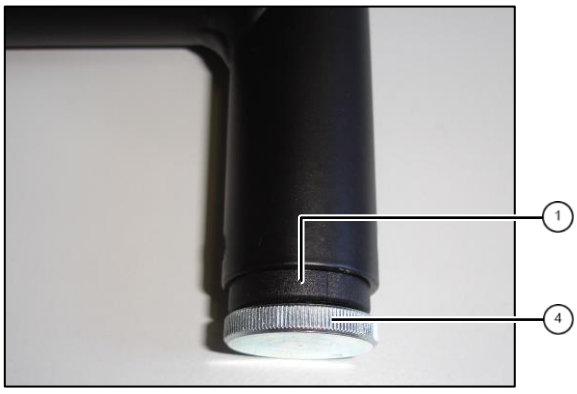


fig. 3: kickstand plug and knurled screw

Datei: VBK0029-Staenderfuesse-180420.docx