Lampenhalter-Set für Fox-Gabel (VBK0089)

Der Lampenhalter ermöglicht die Montage des Frontlichts an Fox-Federgabeln mit 1 1/8“ Schaftrohr.

Stand: 12.04.2019 16:11:00

Lieferumfang

- **1x** Lampenhalter
- **1x** Aheadset-Kralle, 1 1/8“
- **1x** Aheadset-Kralle, 1“
- **1x** Zylinderkopfschraube (M6x40 ISO 4762 A2)
- **1x** Unterlegscheibe (d = 6 mm DIN 134 A2)

Aheadset-Kralle montieren

1. Vorderrad und Schutzblech demontieren.
2. Aheadset-Kralle von unten in Gabelschaft einschlagen. Je nach Innendurchmesser des Gabelschaftes die 1“- ① oder die 1 1/8“-Kralle ② verwenden.

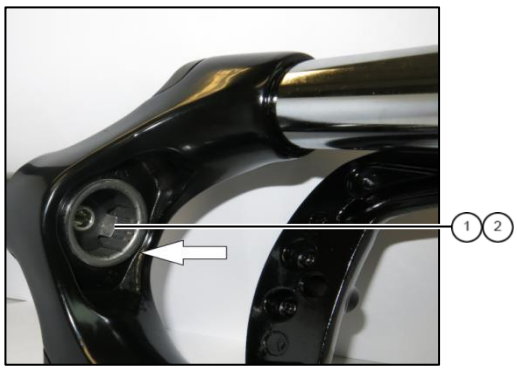


Abb. 1: Aheadset-Kralle



Abb. 2: Lampenhalter

Lampenhalter montieren:

1. Lampenhalter ③ mit Schraube ④ und Unterlegscheibe ⑤ an Aheadset-Kralle montieren. Noch nicht festschrauben
2. Frontlicht montieren und ausrichten. Lampenhalter möglichst weit nach hinten schieben, so dass er noch nicht den Rahmen berührt. Schraube ④ festziehen
3. Lichtkabel mit Kabelbinder an Lampenhalter fixieren, um Kabelbruch am Frontlicht zu vermeiden.
4. Federgabel vorsichtig komplett einfedern.

❗ Die obere Schutzblechbefestigung darf den Lampenhalter nicht berühren.

5. Wenn Berührung stattfindet, dies durch eine geänderte Schutzblechbefestigung vermeiden (z. B. eine andere Schraube mit flacherem Kopf verwenden.



Abb. 3: obere Schutzblechbefestigung

Datei: VBK0089-Fox-Lampenhalter-Set-160506.docx

Stand: 12.04.2019 16:11:00

Light bracket Set Fox (VBK0089)

The light bracket allows to mount the front light at Fox front fork crowns.

Scope of delivery

- **1x** light bracket
- **1x** Aheadset star nut, 1 1/8“
- **1x** Aheadset star nut, 1“
- **1x** bolt (M6x40 ISO 4762 A2)
- **1x** washer (d = 6 mm DIN 134 A2)

Mounting the star nut

1. Dismantle front wheel and front fender.
2. Press Aheadset star nut into lower end of steerer. Use 1“ ① or 1 1/8“ ② star nut depending on the steerers ID.

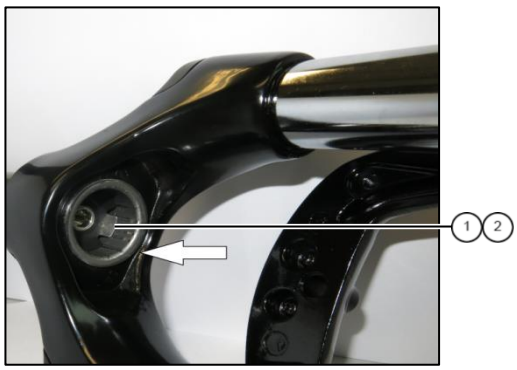


Fig. 2: star nut



Fig. 2: light bracket

Mounting the light bracket

1. Mount light bracket ③ at star nut with bolt ④ and washer ⑤. Do not tighten it yet.
2. Install and adjust front lightFrontlicht. Move the light bracket back as far as possible but without touching the frame. Tighten bolt ④.
3. Fix the light cable at the light bracket with a cable tie to prevent light cable fatigue.
4. Carefully use the complete travel of the front fork.

The upper fender mount must not touch the light bracket (see fig 3).

5. When the upper fender mount is touching the light bracket: use other bolt with flat head.



Fig. 3: upper fender mount

Datei: VBK0089-Fox-Lampenhalter-Set-160506.docx