Hundekit Carrie inkl. Befestigungsbügel

Art-Nr. 233047; VBK0608; Stand: 09.03.2026

HINWEIS
Montageanleitung Handel an den Kunden aushändigen.

WARNUNG
Risiko einer Strangulation beim Hundetransport ohne geeignetes Hundegeschirr.

Hunde dürfen im Fahrzeug nur mit einem geeigneten Hundegeschirr in Kombination mit dem Hundekit transportiert werden. Eine Befestigung ausschließlich am Halsband kann bei plötzlichem Bremsen oder einem Unfall zu Strangulationsgefahr führen.

Vor jeder Fahrt

Sicherstellen, dass das Hundegeschirr korrekt sitzt und ordnungsgemäß mit dem Haken (2.1) des Hundekits verbunden ist.

Montageanleitung Handel

HINWEIS
Die Montage des Hundekit Carrie inkl. Befestigungsbügel darf nur von Fachpersonal durchgeführt werden.

Lieferumfang

Nr.	Benennung	Art-Nr.	Anzahl
1	Hundematte Carrie	232739	1x
1.1	Klettverschluss	------	2x
1.2	Handschlaufe	------	1x
2	Hakengurt, vollst.	234062	1x
2.1	Haken	------	1x
2.2	Schlaufe	------	1x
2.3	Zurröse	------	1x
3	U-Bügel CC24, vollst.	230159	1x
3.1	Querstrebe	------	1x
4	Linsenkopfschraube M5x20 (100) (ohne Abb.)	------	4x
5	U-Scheibe M5 klein d=5.3mm Brüniert DIN 125 A2 (4) (ohne Abb.)	-----	4x
	Anleitung Hundekit Carrie (ohne Abb.)	233047	1x

Teileübersicht

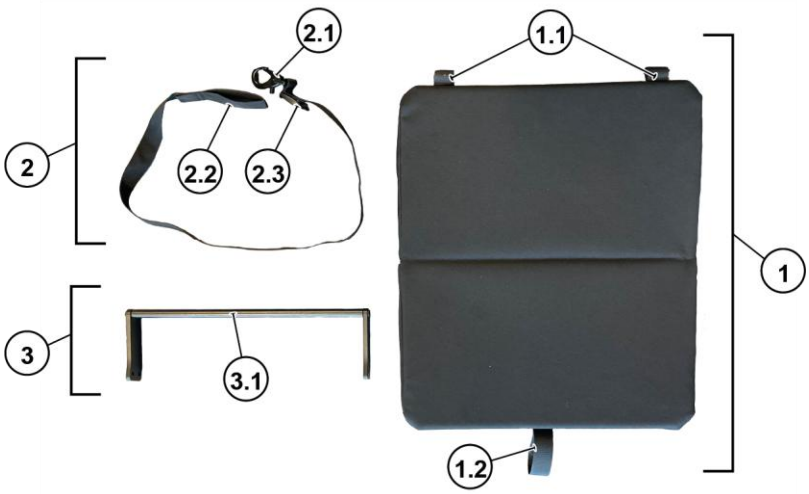

Abb. 01

U-Bügel befestigen

HINWEIS
Ausrichtung U-Bügel (3) beachten.

Querstrebe (3.1) des U-Bügels (3) nach unten und nach vorne in Fahrtrichtung ausrichten, siehe Pfeile.

1. U-Bügel (3) im Einbauraum positionieren.
2. Ü-Bügel (3) 4x mit Befestigungselementen (4) und (5) befestigen.

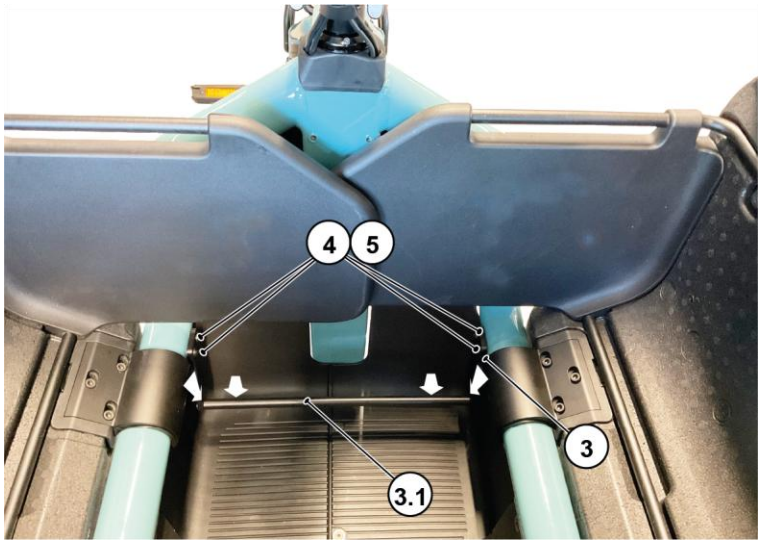

Abb. 02

Hundematte befestigen

HINWEIS
Ausrichtung Hundematte (1) beachten.

Handschlaufe (1.2) der Hundematte (1) nach oben und nach vorne in Fahrtrichtung ausrichten.

1. Hundematte (1) im Einbauraum positionieren.
2. Hundematte (1) 2x mit Klettverschluss (1.1) an Querstrebe (3.1) befestigen.

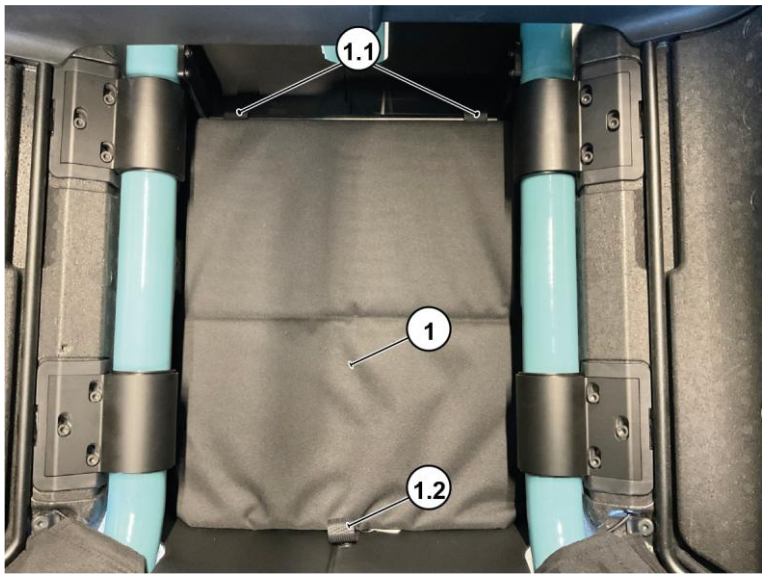

Abb. 03

Hakengurt

Der Hakengurt (2) kann an einer von drei vorgesehenen Befestigungspositionen im Einbauraum befestigt werden, an der Querstrebe (3.1) des U-Bügels bzw. am Rahmen (6) und (7) der Flexbox. Die Auswahl der geeigneten Position erfolgt in Abhängigkeit von der Größe des Hundes, um eine sichere und ergonomisch korrekte Sicherung zu gewährleisten.

HINWEIS

Stellen Sie sicher, dass der Hakengurt (2) formschlüssig befestigt ist. Die gewählte Position muss eine stabile Fixierung des Hundes ermöglichen, ohne dessen Bewegungsfreiheit unnötig einzuschränken.

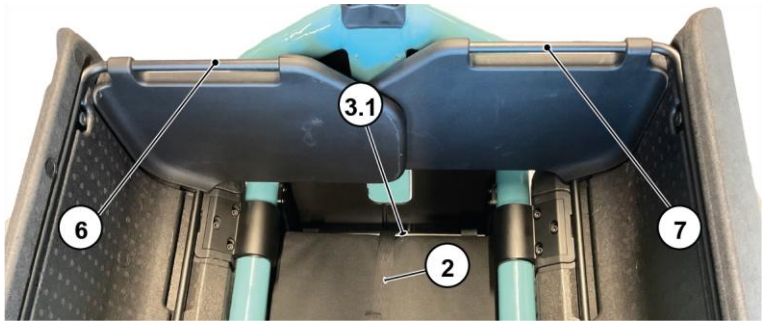

Abb. 04

Hakengurt befestigen

Hakengurt (2) unter der Querstrebe (3.1) des U-Bügels einfädeln (optionale Befestigungsposition), durchziehen, an Zurröse (2.3) Einschlaufen durchziehen und auf gewünschter Länge festziehen.

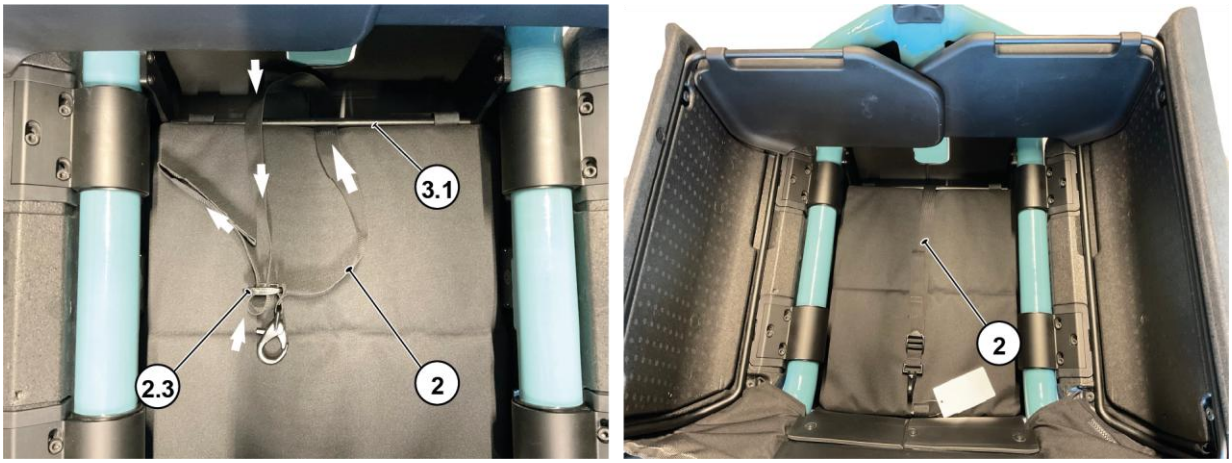

Abb. 05

Carrie Dog kit incl. mounting bracket

Art. no. 233047; VBK0608; Dated: 09.03.2026

NOTICE
Hand out the dealer assembly instructions to customer.

WARNING
Risk of strangulation when transporting dogs without a suitable dog harness.

Dogs may only be transported in the vehicle with a suitable dog harness in combination with the dog kit. Fastening only to the collar can lead to a risk of strangulation in the event of sudden braking or an accident.

Before every ride

Ensure that the dog harness fits correctly and is properly connected to the hook (2.1) of the dog kit.

Dealer Assembly instruction

NOTICE
Only allow qualified personnel to assemble the Carrie Dog kit.

Scope of delivery

No.	Part name	Art-no.	Number
1	Carrie dog mat	232739	1x
1.1	Hook and loop fastener	------	2x
1.2	Hand loop	------	1x
2	Strap with hook, complete	234062	1x
2.1	Hook	------	1x
2.2	Loop	------	1x
2.3	Lashing eyelet	------	1x
3	U-bracket CC24, complete	230159	1x
3.1	Cross brace	------	1x
4	Oval head screw M5x20 (100) (not shown)	------	4x
5	Washer M6 small d=5.3mm burnished DIN 125 A2 (not shown)	-----	4x
	Instructions Carrie Dog Kit Carrie (not shown)	233047	1x

Overview of parts

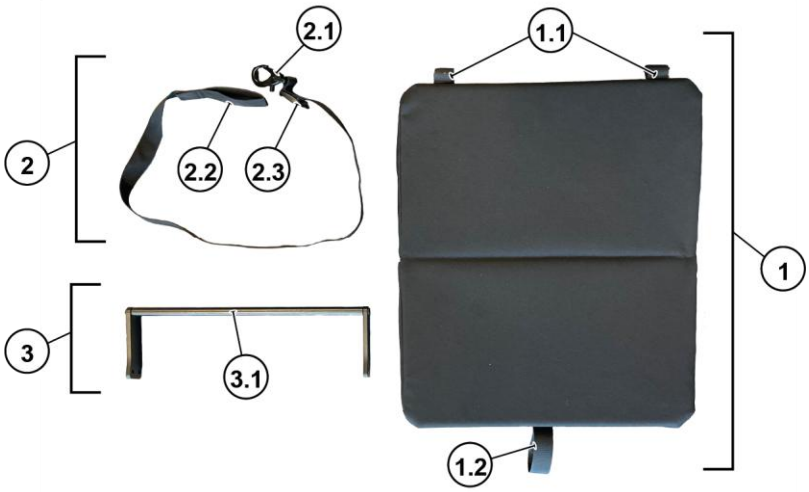

Fig. 01

Fastening the U-bracket

NOTICE

Note the alignment of the U-bracket (3).

Align the cross brace (3.1) of the U-bracket (3) downwards and forwards in the direction of travel, see arrows.

1. Position the U-bracket (3) in the installation space.
2. Fasten the U-bracket (3) 4x with fastening elements (4) and (5).

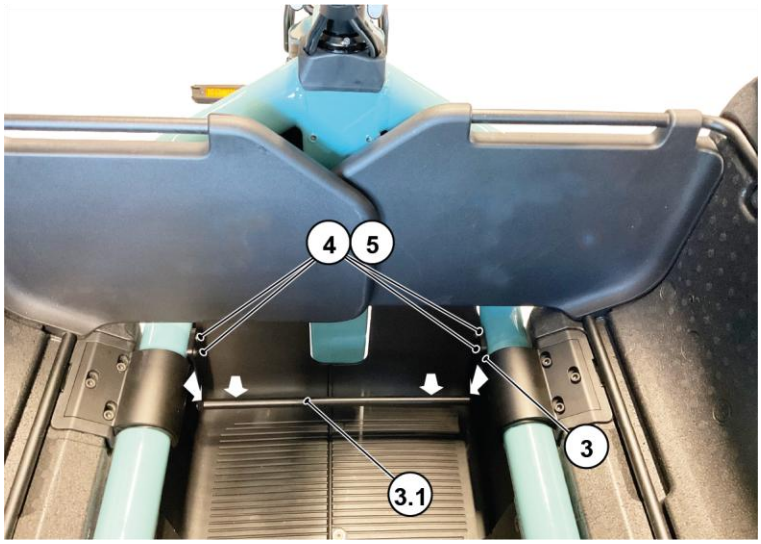

Fig. 02

Attaching the dog mat

NOTICE

Note the alignment of the dog mat (1).

Align the hand loop (1.2) of the dog mat (1) upwards and forwards in the direction of travel.

1. Position the dog mat (1) in the installation space.
2. Attach the dog mat (1) twice to the cross brace (3.1) using the hook and loop fastener (1.1).

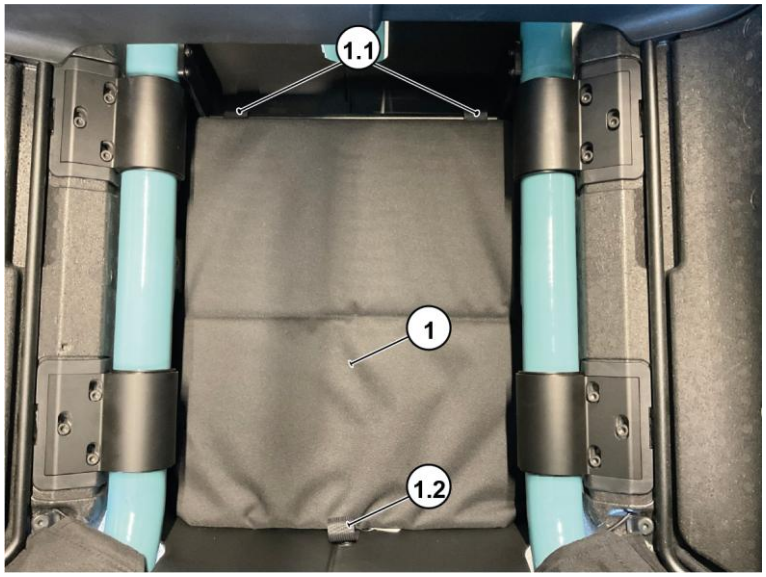

Fig. 03

Strap with hook

The strap with hook (2) can be attached to one of three attachment positions provided in the installation space, to the cross brace (3.1) of the U-bracket or to the frame (6) and (7) of the Flexbox. The suitable position is selected depending on the size of the dog in order to ensure safe and ergonomically correct securing.

NOTICE

Ensure that the strap with hook (2) is fastened positively. The selected position must allow the dog to be secured securely without unnecessarily restricting its freedom of movement.

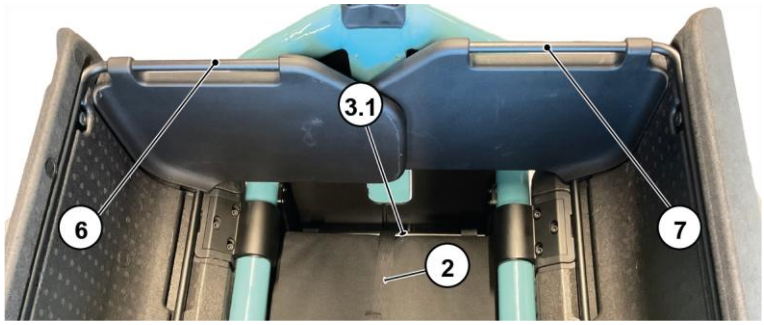

Fig. 04

Fastening the strap with hook

Thread the strap with hook (2) under the cross brace (3.1) of the U-bracket (optional fastening position), pull through, pull through the loops on the lashing eyelet (2.3) and tighten to the desired length.

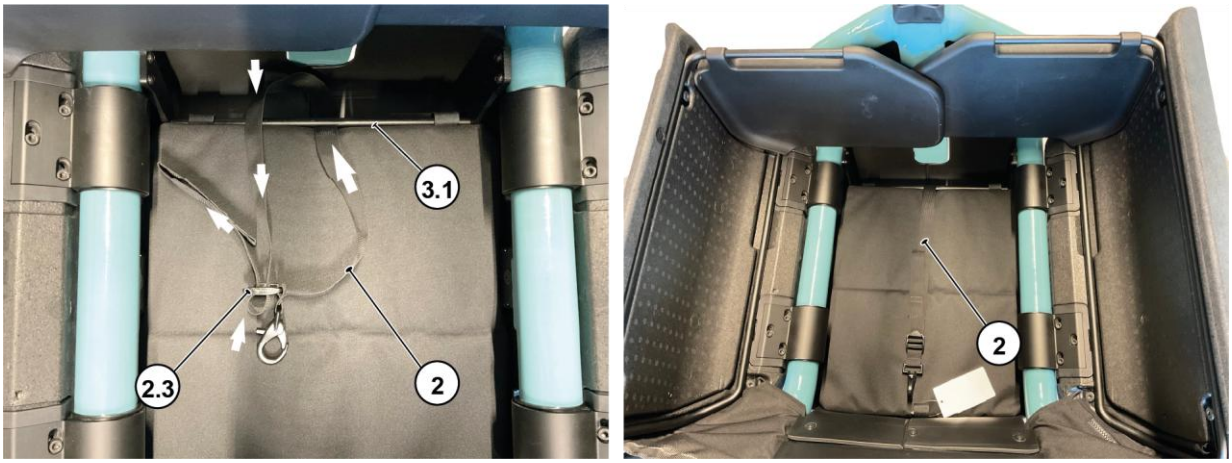

Fig. 05