Zwei Kindersitze Packster Sharing 60/80 (VBK0513)

Montageanleitung Handel

Lieferumfang
2x Kindersitz Packster 60/80
2x Hutmutter M6 selbstsichernd DIN 986 A2
2x Unterlegscheibe d 6.4 DIN 134 A2

Schritt 1
Haken ① zusammendrücken und Sitz in Schlitze ② der Bodenplatte stecken (Abb. 1).

Schritt 2
Gewindestift ③ an der Rückwand des Kindersitzes durch Loch ④ in Rückwand der Box führen (Abb. 2).

Schritt 3
Kindersitze mit den Unterlegscheiben ⑤ und den Hutmuttern ⑥ an der Rückwand der Box fixieren (Abb. 3).

Two Packster Sharing child seats 60/80 (VBK0513)

Dealer Assembly Instructions

Scope of delivery
2x Packster 60/80 child seat
2x self-locking cap nut M6 DIN 986 A2
2x washer d 6.4 DIN 134 A2

Step 1
Press the hook ① together and insert the seat into the slots ② in the base plate (Fig. 1).

Step 2
Insert the threaded pin ③ on the rear wall of the child seat through the hole ④ in the rear wall of the box (Fig. 2).

Step 3
Secure the child seat with the washers ⑤ and the cap nuts ⑥ to the rear wall of the box (Fig. 3).

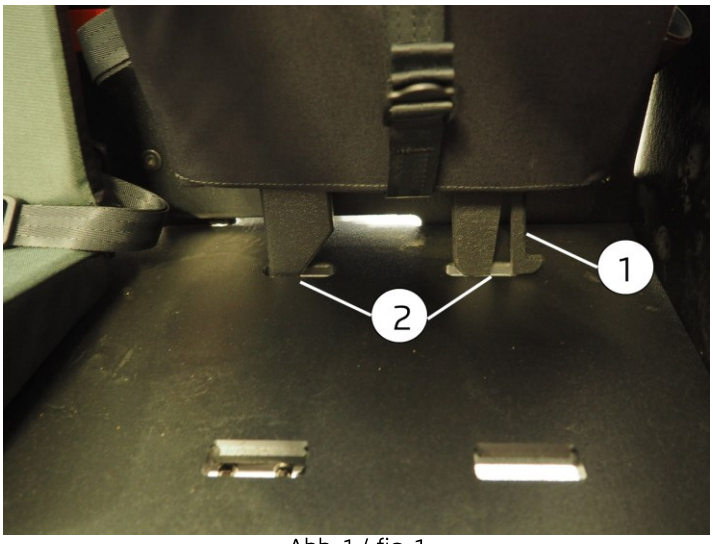


Abb. 1 / fig. 1

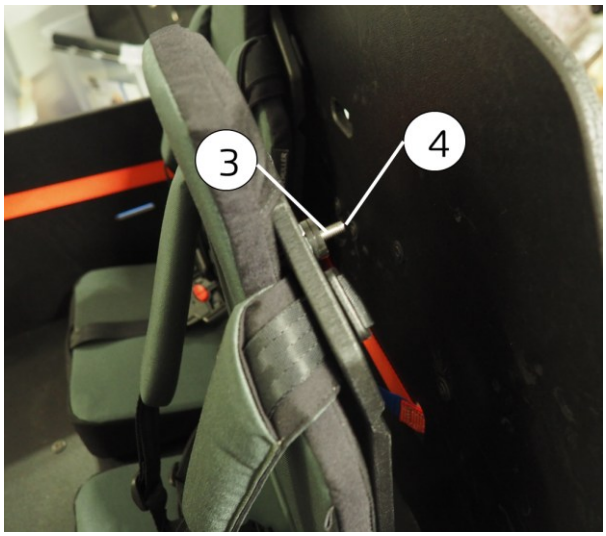


Abb. 2 / fig. 2

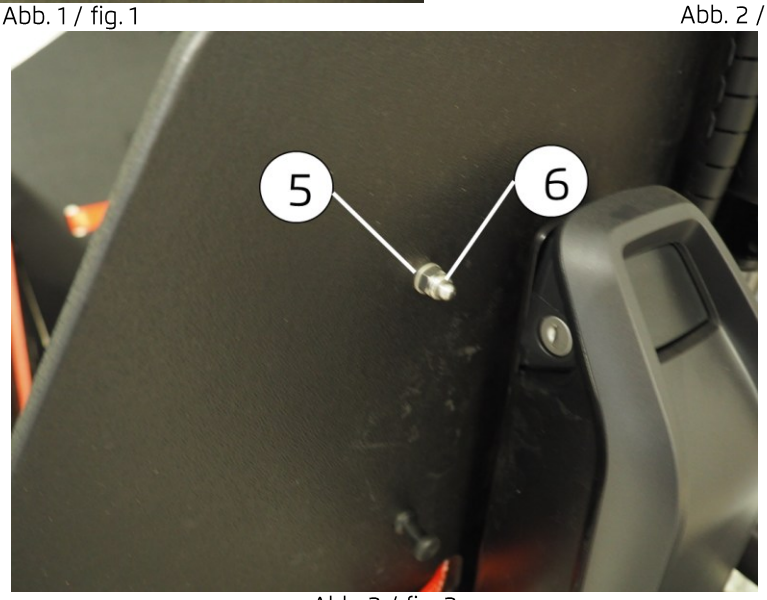


Abb. 3 / fig. 3

Riese & Müller GmbH · Am Alten Graben 2 · 64367 Mühltal · Germany
Phone: +49 6151 36686-0 · Fax: +49 6151 36686-489 · team@r-m.de · www.r-m.de